GDM-90W01T5

SERVICE MANUAL

AEP Model

Chassis No. SCC-K49B-A

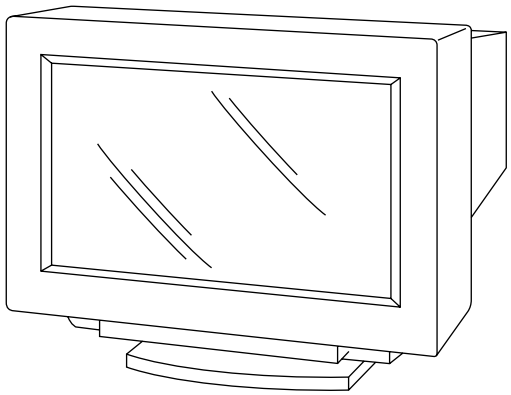

W1 CHASSIS

SPECIFICATIONS

Picture tube	0.25 – 0.28 mm aperture grille pitch 24 inches measured diagonally 90-degree deflection
Viewable image size	Approx. 482 × 304 mm (w/h) (19 × 12 inches) 22.5" viewing image
Resolution	Horizontal: Max. 1920 dots Vertical: Max. 1200 lines
Standard image area	Approx. 473 × 296 mm (w/h) (18 5/8 × 11 3/4 inches)
Deflection frequency	Horizontal: 30 to 96 kHz Vertical: 50 to 160 Hz
Input	HD15 (1), 5 BNC (1) R/G/B: 75 Ω, 0.714 Vp-p, positive HD/VD or Composite sync Sync-on-green: 0.286 Vp-p, negative
AC input voltage/current	
	100 to 120 V, 50/60 Hz, 2.2 A 200 to 240 V, 50 – 60 Hz, 1.4 A
Power consumption	Max. 200 W
Dimensions	580 × 500 × 548 mm (w/h/d) (22 7/8 × 19 3/4 × 21 5/8 inches)
Mass	Approx. 41 kg (90 lb 6 oz)

Design and specifications are subject to change without notice.

COLOR GRAPHIC DISPLAY

POWER SAVING FUNCTION

This monitor is capable of three states of reduced power consumption. By sensing the absence of video signals and one or both sync signals coming from the host computer, it will reduce power consumption as follows.

Power consumption state	Power consumption	Recovery time	power saving indicator	power indicator
1 Normal operation	≤ 200 W	–	Off	Green on
2 Standby (1st state)	≤ 140 W	Approx. 3 sec.	Orange on	Green on
3 Suspend (2nd state)	≤ 15 W	Approx. 3 sec.	Orange on	Green on
4 Active-off (3rd state)	≤ 8 W	Approx. 10 sec.	Orange on	Off
5 Power-off	0 W	–	Off	Off

DIAGNOSIS

Failure	Power Saving LED	Power LED
HV, +B failure	Off	Blink Amber
Horizontal/Vertical deflection failure, thermal protector	Blink Amber	Off
ABL protector	Blink Amber	Blink Amber
Aging/Self Test	Off	Amber (0.5 sec) → Off (0.5 sec) → Green (0.5 sec) → Off (0.5 sec) →

Aging Mode: Video aging — During Power Save, press “OPTION” Key for longer than 2 seconds.
Self Test: OSD color-bar indication — During Power Save, press “CONTRAST+” Key for longer than 2 seconds.
Self Test: OSD All White indication — During Poewr Save, press “COLOR” key for longer than 2 seconds.

TIMING SPECIFICATION

PRIMARY MODE MODE AT PRODUCTION	MODE1	MODE2	MODE3	MODE4	MODE5	MODE6	PRIMARY MODE7	MODE8	MODE9
RESOLUTION	640 X 480	1280 X 1024	1600 X 1200	1920 X 1080	1920 X 1080	1600 X 1024	1920 X 1200	720 X 400	1920 X 1035
CLOCK	25.175 MHz	135.000 MHz	202.500 MHz	159.840 MHz	216.023 MHz	170.447 MHz	245.480 MHz	28.322 MHz	74.250 MHz
— HORIZONTAL —									
H-FREQ	31.469 kHz	79.976 kHz	93.750 kHz	67.500 kHz	84.384 kHz	81.320 kHz	95.000 kHz	31.469 kHz	33.750 kHz
	µsec	µsec	µsec	µsec	µsec	µsec	µsec	µsec	µsec
H. TOTAL	31.778	12.504	10.667	14.815	11.851	12.297	10.526	31.777	29.630
H. BLK	6.356	3.022	2.765	2.803	2.963	2.910	2.705	6.355	3.771
H. FP	0.636	0.119	0.316	0.200	0.222	0.188	0.261	0.636	0.593
H. SYNC	3.813	1.067	0.948	0.901	1.000	0.939	1.043	3.813	1.185
H. BP	1.907	1.837	1.501	1.702	1.741	1.784	1.401	1.907	1.993
H. ACTIV	25.422	9.481	7.901	12.012	8.888	9.387	7.821	25.422	25.859
— VERTICAL —									
V. FREQ(HZ)	59.940 Hz	75.025 Hz	75.000 Hz	60.000 Hz	72.000 Hz	76.000 Hz	76.000 Hz	70.087 Hz	60.000 Hz
	lines	lines	lines	lines	lines	lines	lines	lines	lines
V. TOTAL	525	1066	1250	1125	1172	1070	1250	449	562.5
V. BLK	45	42	50	45	92	46	50	49	45
V. FP	10	1	1	3	3	3	3	12	5
V. SYNC	2	3	3	3	3	3	3	2	5
V. BP	33	38	46	39	86	40	44	35	35
V. ACTIV	480	1024	1200	1080	1080	1024	1200	400	517.5
— SYNC —									
INT(G)	NO	NO	NO	NO	NO	NO	NO	NO	NO
EXT(H/V)/POLARITY	YES N/N	YES P/P	YES P/P	YES N/N	YES N/N	YES N/N	YES N/N	YES N/P	YES N/N
EXT(CS)/POLARITY	NO	NO	NO	NO	NO	NO	NO	NO	NO
INT/NON INT	NON INT	NON INT	NON INT	NON INT	NON INT	NON INT	NON INT	NON INT	INT

96.8.22 VER.

TABLE OF CONTENTS

Section	Title	Page
1.	**GENERAL**	4
2.	**DISASSEMBLY**	
2-1.	Cabinet Removal	11
2-2.	D Board Removal	11
2-3.	G Board Removal	12
2-4.	A Board Removal	12
2-5.	M Board Removal	13
2-6.	L Board Removal	13
2-7.	Service Position	14
2-8.	Harness Location	
(1)	D Block Side	14
(2)	G Block Side	15
2-9.	H1, H2 and J Boards Removal	15
2-10.	Picture Tube Removal	16
3.	**SAFETY RELATED ADJUSTMENT**	17
4.	**ADJUSTMENTS**	18
5.	**DIAGRAMS**	
5-1.	Block Diagrams	21
5-2.	Frame Schematic Diagram	27
5-3.	Circuit Boards Location	29
5-4.	Schematic Diagrams and Printed Wiring Boards	29
(1)	Schematic Diagram of D Board	33
(2)	Schematic Diagrams of G, GA, GB and J Boards	37
(3)	Schematic Diagrams of H1, H2, L and M Boards	41
(4)	Schematic Diagram of A Board	45
5-5.	Semiconductors	52
6.	**EXPLODED VIEWS**	
6-1.	Chassis	54
6-2.	Picture Tube	55
6-3.	Packing Materials	56
7.	**ELECTRICAL PARTS LIST**	57

WARNING!!
NEVER TURN ON THE POWER IN A CONDITION IN WHICH THE DEGAUSS COIL HAS BEEN REMOVED.

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

Note: Hand degauss must be used on stand-by or power-off condition.
This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remein as in the manual.

SECTION 1

GENERAL

Table of Contents

Precautions 3
Getting Started 4
Selecting the Input Signal 4
Functions of Controls 5
Selecting the OSD Language 7
Changing the OSD Position 7
Operating the OSD 7
Adjustments 8
Control Lock Function 12
Degaussing the Screen 12
Plug & Play 13
Damper Wire 13
Power Saving Function 13
Input Signal Warning Function 14
Use of the Tilt-Swivel 14
Specifications 14
Troubleshooting 15

Precautions

Installation

- Prevent internal heat build-up by allowing adequate air circulation. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation holes.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not place the unit near equipment which generates magnetism, such as a converter or high voltage power lines.

Maintenance

- Clean the cabinet, panel and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzine.
- Do not rub, touch, or tap the surface of the screen with sharp or abrasive items, like a ballpoint pen or a screwdriver. This type of contact may result in a scratched picture tube.

Transportation

When you trasport this monitor for repairing or shipping, use the original carton box and packing materials.

Warning on power connection

- Use a proper power cord for your local power supply.

Examples of plug shapes



for 100 to 120 V AC for 200 to 240 V AC

- Before disconnecting the power cord, wait for at least 30 seconds after turning off the power to allow the static electricity on the CRT display surface to discharge.
- After the power has been turned on, the CRT is demagnetized for approximately five seconds. This generates a strong magnetic field around the bezel, which may affect the data stored on magnetic tapes or disks near the bezel. Place such magnetic recording equipment and tapes/disks away from this unit.

The socket-outlet should be installed near the equipment and be easily accessible.

Getting Started

Before using this monitor, check that the following items are included in your package:
- Monitor (1)
- This operating instructions (1)

This monitor will sync to platforms running at horizontal frequencies between 30 and 96 kHz.

Step 1: Connect the monitor to the computer.

With the computer switched off, connect the video signal cable to the video output of the computer.

Note
Do not touch the pins of the video signal cable.

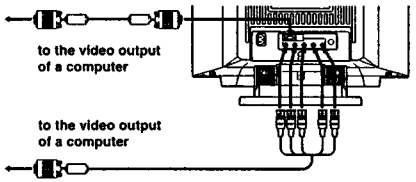

Step 2: Connect the power cord.

With the monitor switched off, connect the proper power cord for your local power supply to the monitor and the other end to the power outlet.

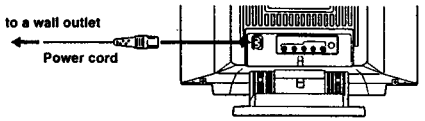

Step 3: Turn on the monitor and computer.

Step 4: If necessary, adjust the user controls according to your personal preference.

The installation of your monitor is complete. Enjoy your monitor.

Selecting the Input Signal

This monitor has two signal input connectors and can connect two computers. When the power of both computers is on, select the signal you want to input as follows.

1 **Turn on power of the monitor and the computer.**

2 **Select the input signal.**



To input the signal from the computer connected to the HD15 connector
Set the input select switch to 1.

To input the signal from the computer connected to the 5 BNC's connector
Set the input select switch to 2.

If only one computer is connected or turned on
Set the input select switch to ⏻ (center position). The input signal is automatically selected.

3 **If necessary, adjust the user controls according to your preference on pages 8 to 11.**

When you set the input select switch to ⏻ and connect computers to both connectors
If you turn on or restart the computer you want to input a signal from, or the computer is in power saving mode, the monitor may automatically select another computer's signal. This is because no signal is input to the monitor at that moment. If this happens, select the signal using the input select switch.

Functions of Controls

See the given pages for further description.

Front

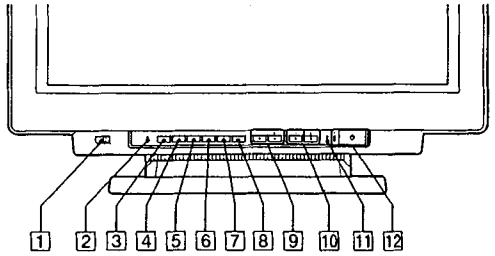

1 **Input select switch (page 4)**
Selects the input signal.

2 **(reset) button (pages 8 – 11)**
Resets the adjustment to the factory preset levels.

3 **(option) button (pages 7, 12)**
Displays the "OPTION" OSD (On Screen Display).

4 **(color) button (page 11)**
Displays the "COLOR" OSD to adjust color temperature.

5 **(screen) button (pages 10, 12)**
Displays the "SCREEN" OSD to adjust the vertical and horizontal convergence, etc.

6 **(geometry) button (pages 9, 10)**
Displays the "GEOMETRY" OSD to adjust the picture rotation and pincushion, etc.

7 **(size) button (page 9)**
Displays the "SIZE" OSD to adjust the picture size.

8 **(center) button (page 8)**
Displays the "CENTER" OSD to adjust the picture position.

9 **(brightness) –/+ (↓/↑) buttons (pages 7 – 12)**
Adjust the picture brightness.

Act as the –/+ (↓/↑) buttons when adjusting other items.

10 **(contrast) –/+ (←/→) buttons (pages 7 – 12)**
Adjust the contrast.

Act as the –/+ (←/→) buttons when adjusting other items.

11 **power saving indicator (page 13)**
Lights up when the monitor is in the Power Saving Mode.

12 **power switch and indicator (page 13)**
Turns the monitor on or off. The indicator lights up when the monitor is turned on.

Rear

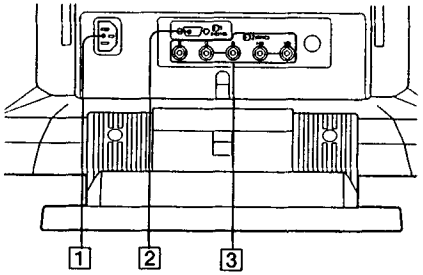

1 **AC IN connector**
Plug in an AC power cord.

2 **Video input 1 connector (HD15)**
Inputs RGB video signal (0.714 Vp-p, positive) and SYNC signal.



Pin No.	Signal	Pin No.	Signal
1	Red	8	Blue Ground
2	Green (Composite Sync on Green)	9	DDC + 5V*
		10	Ground
		11	Ground
3	Blue	12	Bi-Directional Data (SDA)*
4	Ground		
5	DDC Ground*	13	H. Sync
6	Red Ground	14	V. Sync
7	Green Ground	15	Data Clock(SCL)*

* Display Data Channel (DDC) Standard by VESA

3 **Video input 2 connector (5 BNC)**
Inputs RGB video signal (0.714 Vp-p, positive).

OPTION OSD

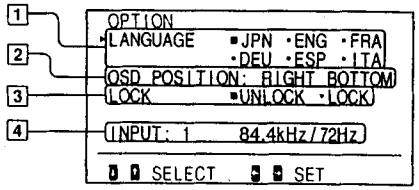

1 **LANGUAGE (page 7)**
Selects an OSD language, Japanese, English, French, German, Spanish, or Italian.

2 **OSD POSITION (page 7)**
Changes the OSD position to be displayed.

3 **LOCK (page 12)**
Turns on or off the control lock function.

4 **INPUT (pages 4,14)**
Shows the current active connector, the BNC connectors or the HD15 connector, and the signal frequency.

Selecting the OSD Language

Japanese, English, French, German, Spanish, or Italian versions of OSD are available.

1 Press the ▢ button.
The "OPTION" OSD appears.

2 Press the ☼↓/↑ button to select "LANGUAGE."

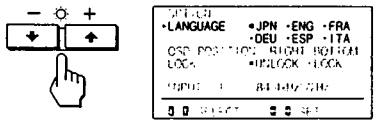

3 Press the ◑←/→ button to select the desired language.



JPN: Japanese, ENG: English, FRA: French,
DEU: German, ESP: Spanish, ITA: Italian

The "OPTION" OSD automatically disappears after about 30 seconds. To turn off the OSD, press the ▢ button again.

Changing the OSD Position

You can change the OSD position, for example, when you want to adjust the picture behind the OSD.

1 Press the ▢ button.
The "OPTION" OSD appears.

2 Press the ☼↓/↑ button to select "OSD POSITION."

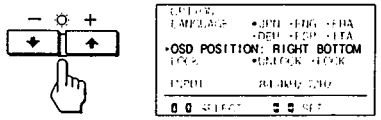

3 Press the ◑←/→ button to move the OSD to the desired position.



The "OPTION" OSD automatically disappears after about 30 seconds. To turn off the OSD, press the ▢ button again.

Operating the OSD

Select a parameter using the ☼↓/↑ buttons in the OSD which parameters are arranged in vercial row, and adjust or select the setting of the selected parameter using the ◑←/→ buttons.

To select a parameter to adjust or select the setting, press ☼↓ or ↑ button.
The green ▶ mark goes to the selected parameter and the parameter becomes yellow.



To adjust or select the settings of the selected parameter, press ◑← or → button.
When adjusting, the bar length and the figure increase or decrease.
When selecting the setting, the green ■ goes to the selected setting.



Adjustments

You can adjust the picture to your preference.

Before adjusting
- Connect the monitor and the computer, turn them on and feed the signal to the monitor.
- Select "LANGUAGE" in the "OPTION" OSD, then select "ENG" (English) on page 7.

Adjusting the picture brightness

The adjustment data becomes the common setting for all input signals received.

1 Press the☼ (brightness) ↓/↑ button.
The "BRIGHTNESS/CONTRAST" OSD appears.



2 Press the ☼↓/↑ button again to adjust picture brightness.
↓ . . . for less brightness
↑ . . . for more brightness

The OSD automatically disappears after about 3 seconds.

To reset, press the ⋯ (reset) button while the OSD is on.
The brightness and contrast are both reset.

Adjusting the picture contrast

The adjustment data becomes the common setting for all input signals received.

1 Press the ◑ (contrast) ←/→ button.
The "BRIGHTNESS/CONTRAST" OSD appears.



2 Press the ◑←/→ button again to adjust picture contrast.
← . . . for less contrast
→ . . . for more contrast

The OSD automatically disappears after about 3 seconds.

To reset, press the ⋯ (reset) button while the OSD is on.
The brightness and contrast are both reset.

Adjusting the picture centering

The adjustment data becomes the individual setting for each input signal received.

1 Press the ⊖⊙ button.
The "CENTER" OSD appears.



2 For vertical adjustment
Press the ☼↓/↑ buttons.



↓ . . . to move down
↑ . . . to move up

For horizontal adjustment
Press the ◑ ←/→ buttons.



← . . . to move left
→ . . . to move right

The OSD automatically disappears after about 10 seconds.
To turn off the OSD, press the ⊖⊙ button again.

To reset, press the ⋯ (reset) button while the OSD is on.
The horizontal and vertical centerings are both reset.

Adjusting the picture size

The adjustment data becomes the individual setting for each input signal received.

1 Press the ⊕⊖ button.
The "SIZE" OSD appears.



2 For vertical adjustment
Press the ☼↓/↑ buttons.



↓ . . . to decrease
↑ . . . to increase

For horizontal adjustment
Press the ◑ ←/→ buttons.



← . . . to decrease
→ . . . to increase

The OSD automatically disappears after about 10 seconds.
To turn off the OSD, press the ⊕⊖ button again.

To reset, press the ⋯ (reset) button while the OSD is on.
The horizontal and vertical sizes are both reset.

Adjusting the picture rotation

The adjustment data becomes the common setting for all input signals received.



1 Press the ▢▢ button.
The "GEOMETRY" OSD appears.



2 Press the ☼↓/↑ buttons.



↓ . . . to rotate counterclockwise
↑ . . . to rotate clockwise

The OSD automatically disappears after about 10 seconds.
To turn off the OSD, press the ▢▢ button again.

To reset, press the ⋯ (reset) button while the OSD is on.
The picture rotation and the pincushion settings are both reset.

Adjusting the pincushion

The adjustment data becomes the individual setting for each input signal received.

1 Press the ▢▢ button.
The "GEOMETRY" OSD appears.



2 Press the ◑←/→ button so that the picture edges become straight.



The OSD automatically disappears after about 10 seconds.
To turn off the OSD, press the ▢▢ button again.

To reset, press the ⋯ (reset) button while the OSD is on.
The picture rotation and the pincushion settings are both reset.

Adjusting the screen

1 Press the ▥ button.
The "SCREEN" OSD appears.

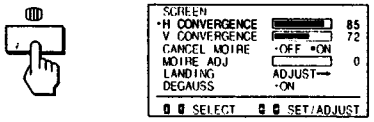

2 Press the ☼↓/↑ button to select the parameter you want to adjust referring to the following.
The selected parameter turns yellow.

The OSD automatically disappears after about 30 seconds.
To turn off the OSD, press the ▥ button again.

To reset, press the ⋯ (reset) button while the OSD is on.
The selected parameter is reset.

Convergence

The adjustment data becomes the common setting for all input signals received.

Press the ◑←/→ button so that the red or blue shadow disappears.

"H CONVERGENCE" (Horizontal convergence)
← . . . to move Red to the left and Blue to the right
→ . . . to move Red to the right and Blue to the left

"V CONVERGENCE" (Vertical convergence)
← . . . to move Red down and Blue up
→ . . . to move Red up and Blue down

Canceling the Moire

The adjustment data becomes the individual setting for each input signal received.

Press the ◑←/→ button to select "ON" for "CANCEL MOIRE."

If the picture becomes unclear
The picure may become unclear by canceling moire.
1 Press the ☼↓/↑ button to select "MOIRE ADJ."
2 Press the ◑←/→ button to adjust beginning from 0 until the moire is minimum.

Landing

Correct when the color is not uniform due to influence from the earth's magnetizm.
The adjustment data becomes the common setting for all input signals received.
First, degauss the screen, then display an entirely white picture for more than 20 minutes before the adjustment to adjust more accurately.

1 Press the ☼↓/↑ button to select "DEGAUSS."
2 Put the ◑→ button.
The screen is degaussed for about five seconds.
3 Press the ☼↓/↑ button to select "LANDING."
4 Press the ◑→ button.
The "LANDING" OSD appears on the screen.



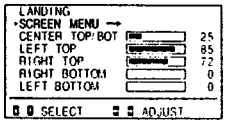

5 Press the ☼↓/↑ button to select the position, and adjust by pressing the ◑ ←/→ button.

To return to the "SCREEN" OSD, select "SCREEN MENU →" and press the ◑→ button.

To reset, press the ⋯ (reset) button while the OSD is on.
The selected parameter is reset.

Adjusting the color temperature

The adjustment data becomes the common setting for all input signals received.

1 Press the ⊡ button.
The "COLOR" OSD appears.

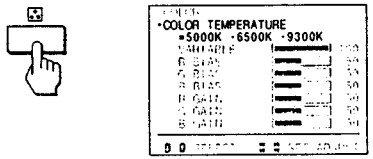

2 Press the ◑←/→ buttons to select a color temperature.
The factory settings are:
5000K, 6500K, 9300K

3 Press the ☼↓/↑ button to select and the ◑←/→ button to adjust the parameter.
VARIABLE:
Adjusts the color selected in step 2 to the desired color temperature. The figure of the selected color temperature changes.
R BIAS/G BIAS/B BIAS:
Adjusts the black level of each signal. "++" appears at the right shoulder of the adjusted color temperature.
R GAIN/G GAIN/B GAIN:
Adjusts the white level of each signal. "++" appears at the right shoulder of the adjusted color temperature.

The OSD automatically disappears after about 30 seconds.
To turn off the OSD, press the ⊡ button again.

To reset all parameters of a particular color temperature
Select the color temperature in step 2, and then press the ••• (reset) button. All parameters of the color temperature are reset and "++" at the right shoulder disappears.

To reset a particular parameters of a particular color temperature
Select the parameter in step 3, and then press the ••• (reset) button. Only the selected parameter of the color temperature is reset.

Resetting to the factory-preset levels

1 Press the button of the OSD you want to reset to the factory setting.

2 When the parameters are arranged in vertical row in the OSD, select a parameter you want to reset by pressing the ☼↓/↑ buttons.

3 Press the ••• (reset) button.



Resetting all adjustment data

When there is no OSD displayed, press and hold the ••• (reset) button for more than two seconds.
All adjustment data including the brightness and contrast are reset to factory-preset levels.

Resetting the picture size, position, moire and geometry* at the same time

When there is no OSD displayed, press and hold the ••• (reset) button for one second.
The above items of the current input signal are reset to factory-preset levels.

* The "Rotation" adjustment (page 9) is not reset.

Control Lock Function

The control lock function disables all the buttons on the front panel except the ⏻ (power) and ⏍ buttons and the INPUT switch.

1 Press the ⏍ button.
The "OPTION" OSD appears.

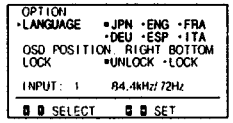

2 Press the ☼↓/↑ button to select "LOCK."

3 Press the ◑←/→ button to select "LOCK."

The "OPTION" OSD automatically disappears after about 30 seconds.
To turn off the OSD, press the ⏍ button again.

Once you select "LOCK," you cannot select other item on the "OPTION" OSD using the ☼↓/↑ button.
If you press any button other than the ⏻ and ⏍ buttons and the input select switch, the 🔑 mark appears on the screen.

To cancel the control lock

Press the ◑←/→ button to select "UNLOCK."

Note
Use the control lock function only when necessary.

Degaussing the Screen

The screen of the monitor is automatically degaussed when the power is turned on (page 3).
You can degauss manually.

1 Press the ▥ button.
The "SCREEN" OSD appears.

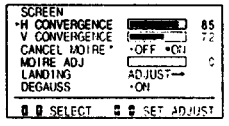

2 Press the ☼↓/↑ button to select "DEGAUSS."

3 Press the ◑→ button.
The screen is degaussed for about five seconds.

Plug & Play

This monitor complies with the DDC™1, DDC2B and DDC2AB which are the Display Data Channel (DDC) standards of VESA.
When a DDC1 host system is connected, the monitor synchronizes with the V. CLK in accordance with the VESA standards and outputs the EDID (Extended Display Identification Data) to the data line.
When a DDC2B or DDC2AB host system is connected, the monitor automatically switches to each communication.

DDC™ is a trademark of Video Electronics Standard Association.

Damper Wire

Using a white background, very thin horizontal lines on the screen are visible as shown below. These lines are damper wires.
The Trinitron tube has a vertically striped Aperture Grill inside. The Aperture Grille allows more light to pass through to the screen giving the Trinitron CRT more color and brightness.
These damper wires are attached to the Aperture Grille to prevent vibration of the Aperture Grille wire so that the screen image is constantly stable.

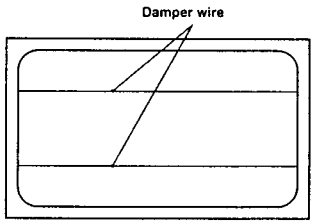

Power Saving Function

This monitor is capable of three states of reduced power consumption. By sensing the absence of video signals and one or both sync signals coming from the host computer, it will reduce power consumption as follows.

	Power consumption state	Power consumption	Recovery time	☼ power saving indicator	⏻ power indicator
1	Normal operation	≤ 200 W	—	Off	Green on
2	Standby (1st state)	≤ 140 W	Approx. 3 sec.	Orange on	Green on
3	Suspend (2nd state)	≤ 15 W	Approx. 3 sec.	Orange on	Green on
4	Active-off (3rd state)	≤ 8 W	Approx. 10 sec.	Orange on	Off
5	Power-off	0 W	—	Off	Off

Power saving operation

- The H-sync is not present.
  ➡ The unit goes into standby state.
- The V-sync is not present.
  ➡ The unit goes into suspend state.
- Both the H-sync and V-sync are not present.
  ➡ The unit goes into active-off state.

The monitor requires a video card or screen saver software which switches off one or both sync signals to activate the power saving function.

Caution
If no video signal is input to the monitor, or if the input select switch is set to the connector to which no signal is input when you turn on the monitor, the input signal warning indicator (page 14) appears. After 30 seconds, the Power Saving function automatically puts the monitor into the Active-off state and the ☼ power saving indicator lights up. Once the horizontal and vertical syncs are sensed, the monitor will automatically return to its Normal operation state.

Input Signal Warning Function

If there is something wrong with the input signal, one of the following messages appears when you turn the monitor off and on, or when you operate the input select switch.
The message disappears after about 30 seconds.



[1] Shows the input select switch setting.

[2] Shows the input signal condition.

"FH: - kHz" indicates no horizontal sync signal.

"FV: - Hz" indicates no vertical sync signal.

"OUT OF SCAN RANGE" indicates that the input signal is not supported by the monitor's specifications.

"NO CONNECTION" indicates that the supplied video signal cable is disconnected from the HD15 connector when the input select switch is set to ⊖1.

Use of the Tilt-Swivel

With the tilt-swivel, this unit can be adjusted to be viewed at the desired angle within 310° horizontally and 20° vertically.
To turn the unit vertically and horizontally, hold it at its bottom with both hands as illustrated below.

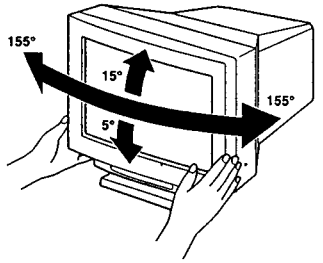

Specifications

Picture tube	0.25 – 0.28 mm aperture grille pitch 24 inches measured diagonally 90-degree deflection
Viewable image size	Approx. 482 × 304 mm (w/h) (19 × 12 inches) 22.5" viewing image
Resolution	Horizontal: Max. 1920 dots Vertical: Max. 1200 lines
Standard image area	Approx. 473 × 296 mm (w/h) (18 5/8 × 11 3/4 inches)
Deflection frequency	Horizontal: 30 to 96 kHz Vertical: 50 to 160 Hz
Input	HD15 (1), 5 BNC (1) R/G/B: 75 Ω, 0.714 Vp-p, positive HD/VD or Composite sync Sync-on-green: 0.286 Vp-p, negative
AC input voltage/current	100 to 120 V, 50/60 Hz, 2.2 A 200 to 240 V, 50 – 60 Hz, 1.4 A
Power consumption	Max. 200 W
Dimensions	580 × 500 × 548 mm (w/h/d) (22 7/8 × 19 3/4 × 21 5/8 inches)
Mass	Approx. 41 kg (90 lb 6 oz)

Design and specifications are subject to change without notice.

Troubleshooting

This section may help you isolate a problem and as a result, eliminate the need to contact technical support, allowing continued productivity.

Symptom	Check these items
No picture	
If the ⏻ power indicator nor ⚙ power saving indicator is lit	• Check that the power cord is properly connected. • Check that the ⏻ power switch is in the "on" position.
If the ⚙ power saving indicator is lit	• Check that your computer power switch is in the "on" position. • The monitor will recover when you press any key on the keyboard of the computer. • The input select switch setting is incorrect. • Check that the video signal cable is properly connected and all plugs are firmly seated in their socket. • Check that the 5 BNC's are connected in the correct order (from the power cord side: Red–Green–Blue–HD–VD). • Ensure that no pins are bent or pushed in the HD15 video input connector. • Check that the video board is seated completely in the proper bus slot.
If the ⏻ power indicator is flashing in green	• Check that the video frequency range is within that specified for the monitor. (Horizontal: 30 – 96 kHz, Vertical: 50 – 160 Hz)
If the ⏻ power and/or ⚙ power saving indicators are flashing in orange	• Turn the monitor off and on. If the indicator is off, the monitor is in the normal condition. If the indicator is still flashing, there is a potential monitor failure.
If you do the above procedures and the monitor does not recover	• Unplug the video input 1 and 2 connectors and wait for 5 seconds. Then press and hold the ❍ + button for 2 seconds to display the color bars. If the color bars appear, the monitor may be in normal condition. Turn the monitor off and on to return to the normal operation mode. If the color bars do not appear, there is a potential monitor failure.
Picture is scrambled	• Check your graphic board manual for proper monitor setting. • Check this manual and confirm that the graphic mode and the frequency at which you are trying to operate is supported (page 4). Even within the proper range some video boards may have a sync pulse that is too narrow for the monitor to sync correctly.
Color is not uniform	• Degauss the monitor (page 12). If you place equipment which generates a magnetic field such as a loudspeaker, or you change the direction of the monitor, color may lose uniformity. This function is to demagnetize the metal frame of the CRT to obtain a neutral field for uniform color reproduction. If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result. • Adjust the landing (page 10).
You cannot adjust the monitor with the buttons on the front panel	• If the control lock function is set to on, set it to off on the OPTION OSD (page 12). You will be able to adjust the monitor.
White does not look white	• Adjust color (page 11). • Check that the 5 BNC's are connected in the correct order (from the power cord side: Red–Green–Blue–HD–VD).
Screen image is not centered or sized properly	• Adjust the centering or size (page 8, 9). • Some video modes do not fill the screen to the edge of the monitor. There is no single answer to solve the problem. This problem tends to occur on higher refresh timings.
Edges of the image are curved	• Adjust the pincushion (page 10).

Continued to the next page

Symptom	Check these items
White lines show red or blue shades at edges	• Adjust the convergence (page 10).
Picture is fuzzy	• Adjust the contrast and brightness (page 8). • Degauss the monitor (page 12). If you place equipment which generates a magnetic field such as a loudspeaker, or you change the direction of the monitor, color may lose uniformity. This function is to demagnetize the metal frame of the CRT to obtain a neutral field for uniform color reproduction. If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result. • If red or blue shades are found at the edge of images, adjust the convergence (pages 10). • If the moire is cancelled, the picture may become fuzzy. Adjust so that the picture is as clear as possible (page 10).
Picture bounces or has wavy oscillations	• Isolate and eliminate any potential sources of electric or magnetic fields. Common causes for this symptom are electric fans, fluorescent lighting, laser printers, and so on. • If you have another monitor close to this monitor, increase the distance between them to reduce the interference. • Try plugging the monitor into a different AC outlet, preferably on a different circuit. • Try the monitor on a completely different computer in a different room.
Picture is not stable	• Set the refresh rate to non-interlace of 75 Hz or more on the computer referring to the computer's manual.
Picture appears to be ghosting	• Eliminate the use of video cable extension cable and/or video switch boxes if this symptom occurs. Excessive cable length or weak connection can produce this symptom.
Two fine horizontal lines (wires) are visible	• These wires stabilize the vertically striped Aperture Grille (page 13). This Aperture Grille allows more light to pass through to the screen giving the Trinitron CRT more color and brightness.
Wavy or elliptical (moire) pattern is visible	• Cancel the moire (page 10). The moire may be modified depending on the connected computer. • Due to the relationship between resolution, monitor dot pitch and the pitch of some image patterns, certain screen backgrounds, especially gray, sometimes show moire. Change your desktop pattern.
Hum is heard right after the power is turned on	• When the power is turned on, the auto-degauss cycle is activated. While the Auto-degauss cycle is activated, a hum may be heard. This is not a malfunction.

• If the problem persists, call your service representative from a location near your monitor.
• Note the model name and the serial number of your monitor. Also note the make and name of your computer and video board.

SECTION 2
DISASSEMBLY

2-1. CABINET REMOVAL

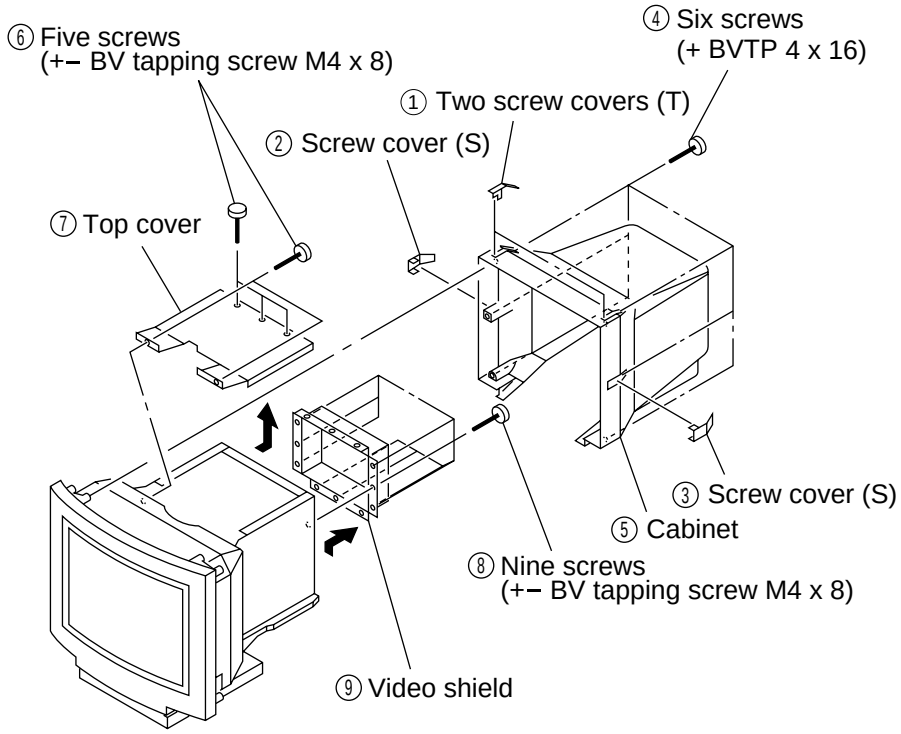

2-2. D BOARD REMOVAL

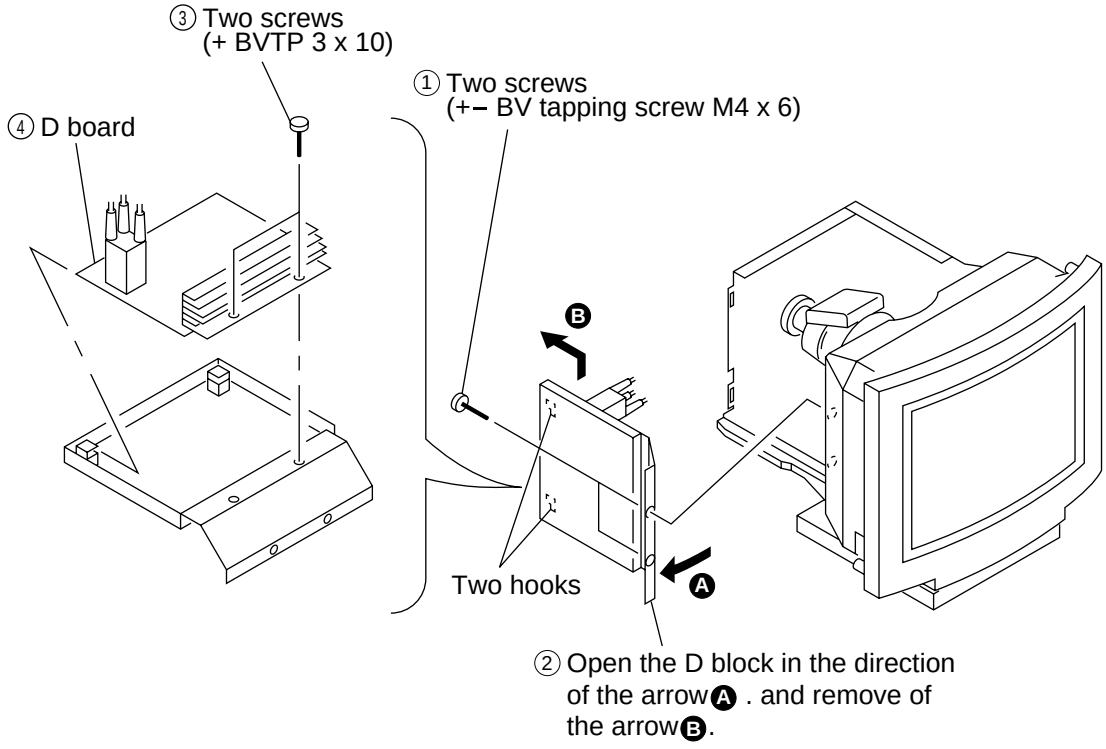

2-3. G BOARD REMOVAL

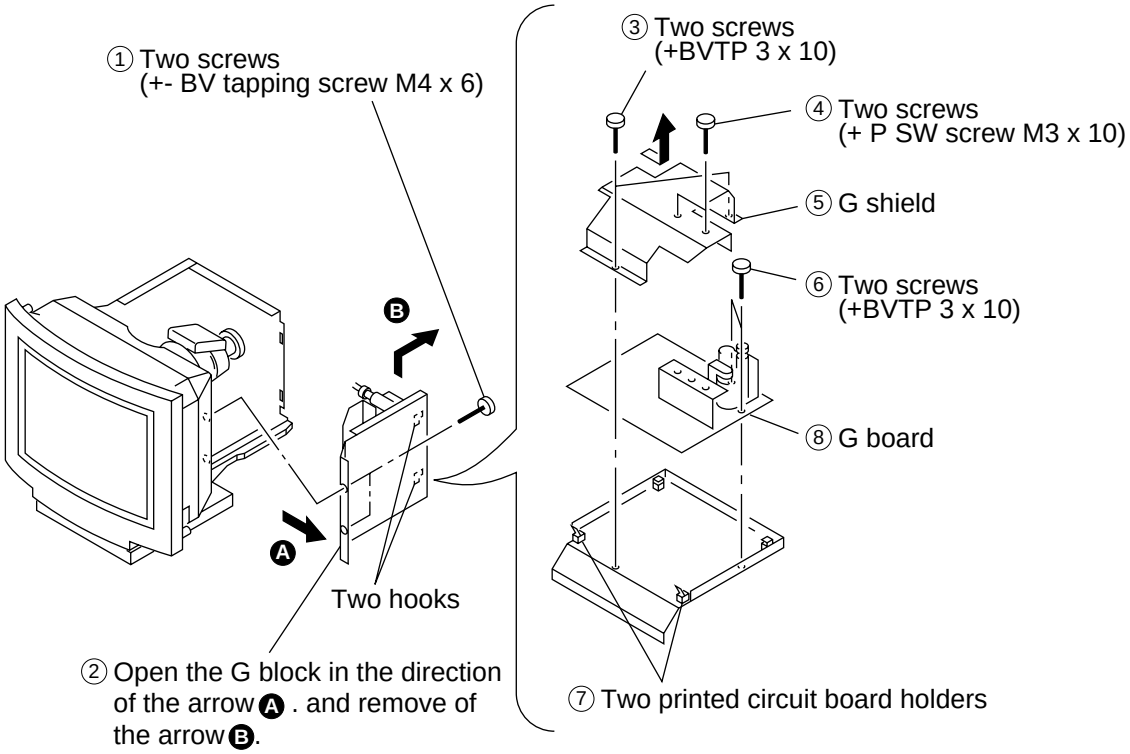

2-4. A BOARD REMOVAL

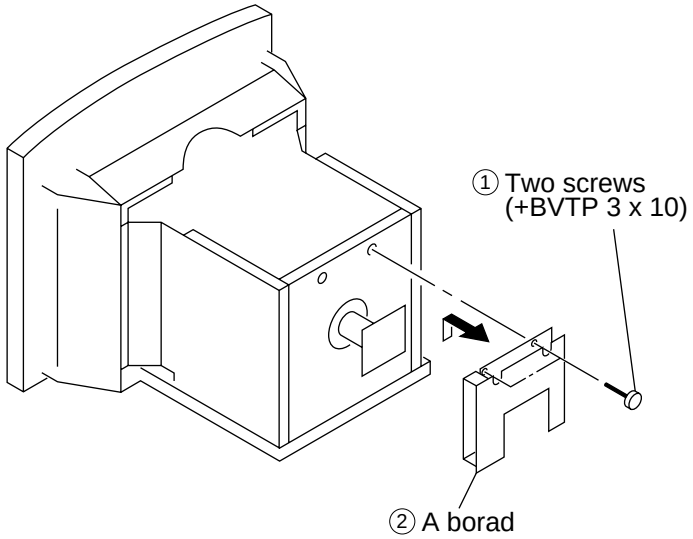

2-5. M BOARD REMOVAL

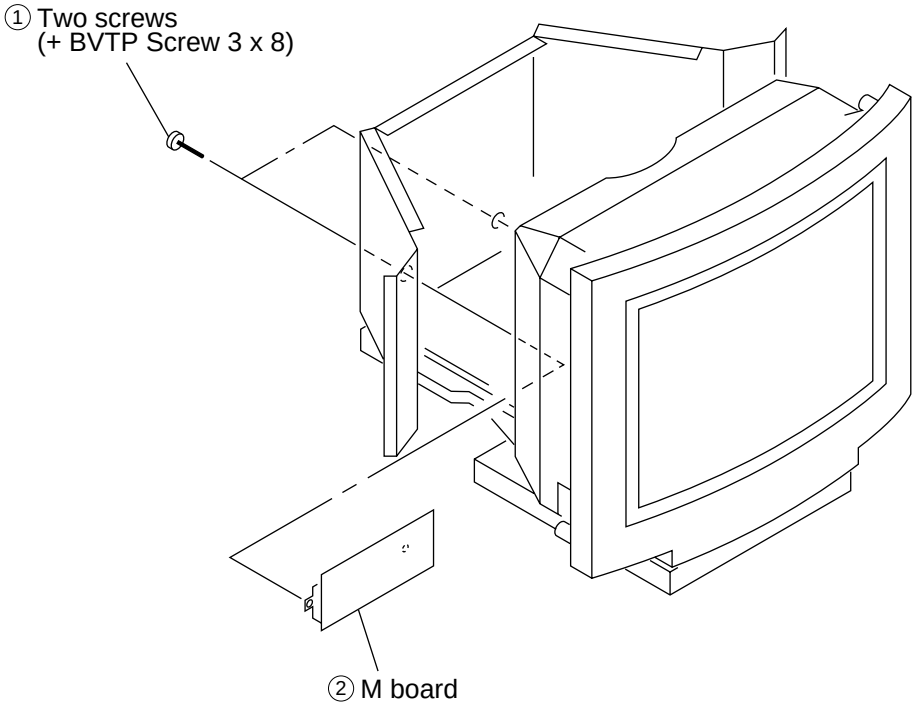

2-6. L BOARD REMOVAL

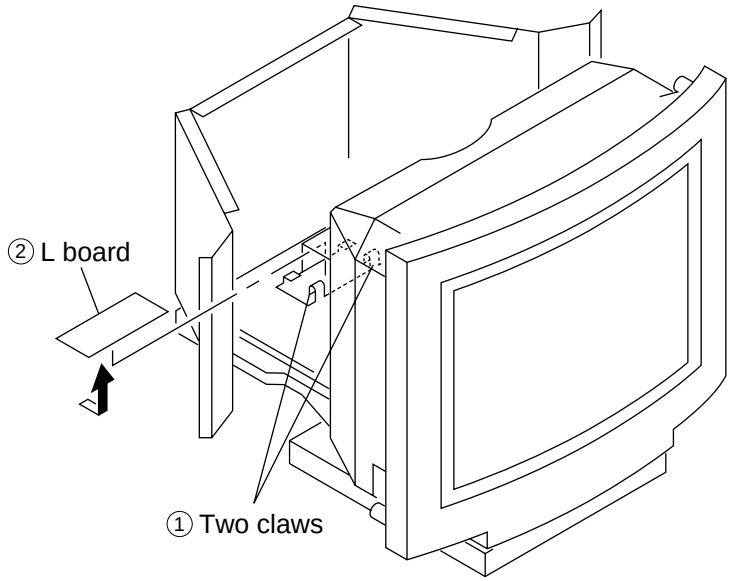

2-7. SERVICE POSITION

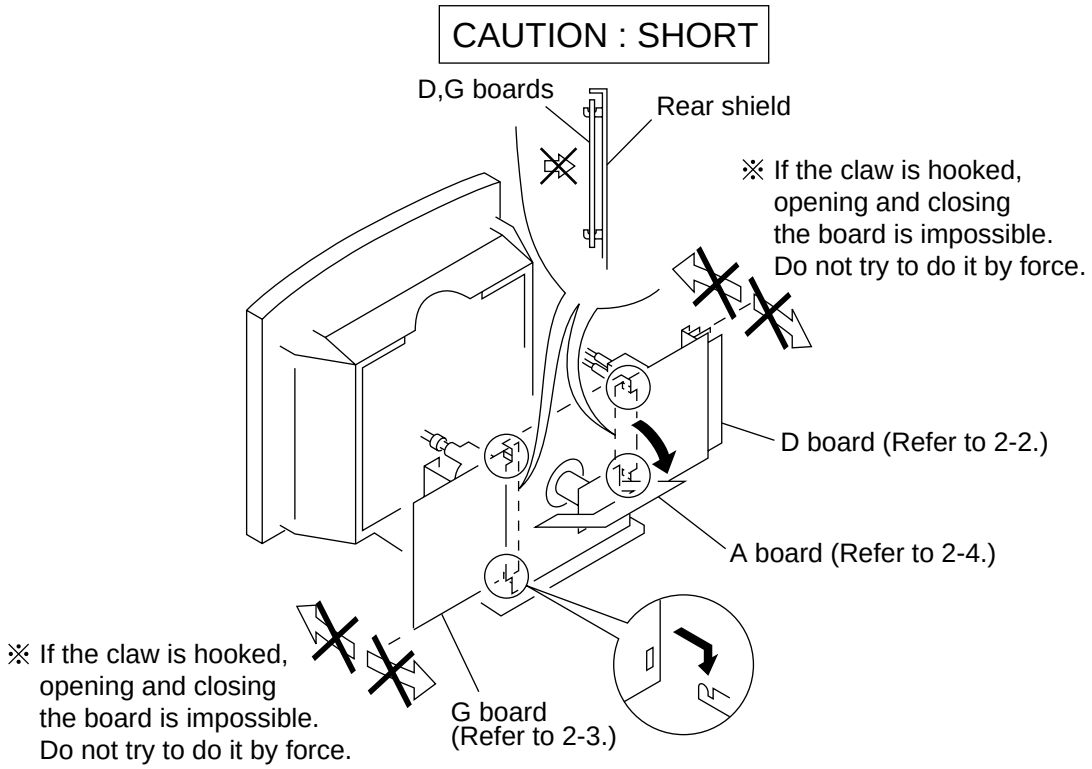

2-8. HARNESS LOCATION

※ The D and G blocks are not widely opened after the wires are properly arranged, as shown in the figure.

(1) D block side

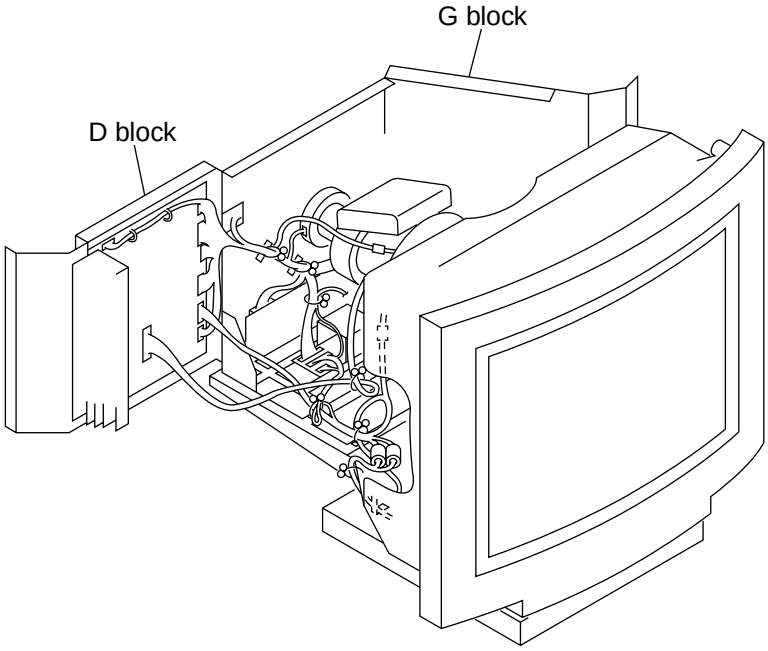

(2) G block side

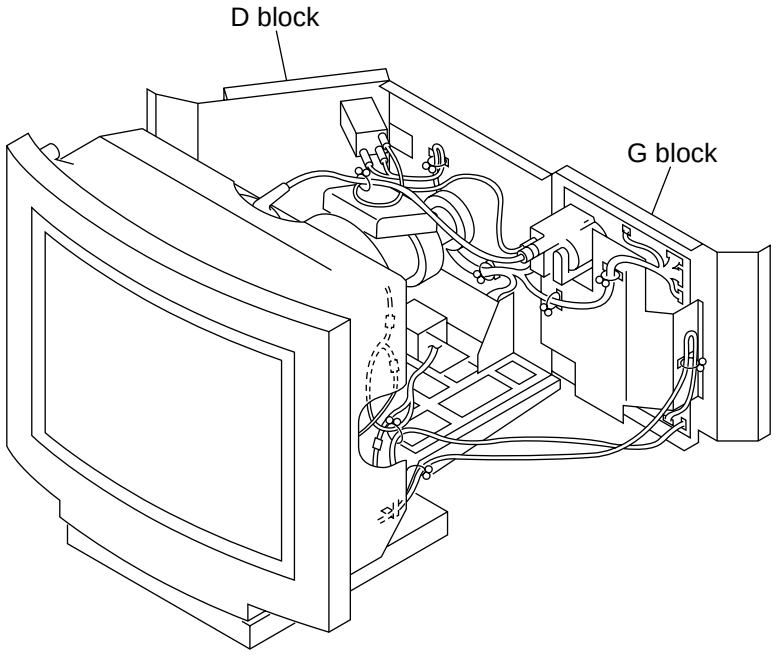

2-9. H1, H2 AND J BOARDS REMOVAL

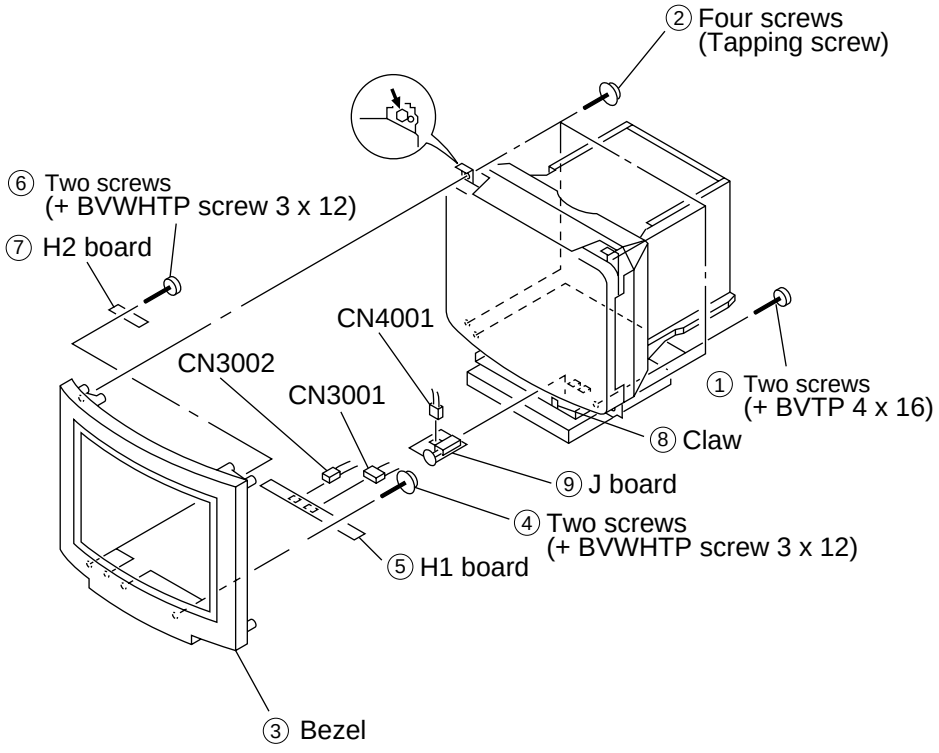

2-10. PICTURE TUBE REMOVAL

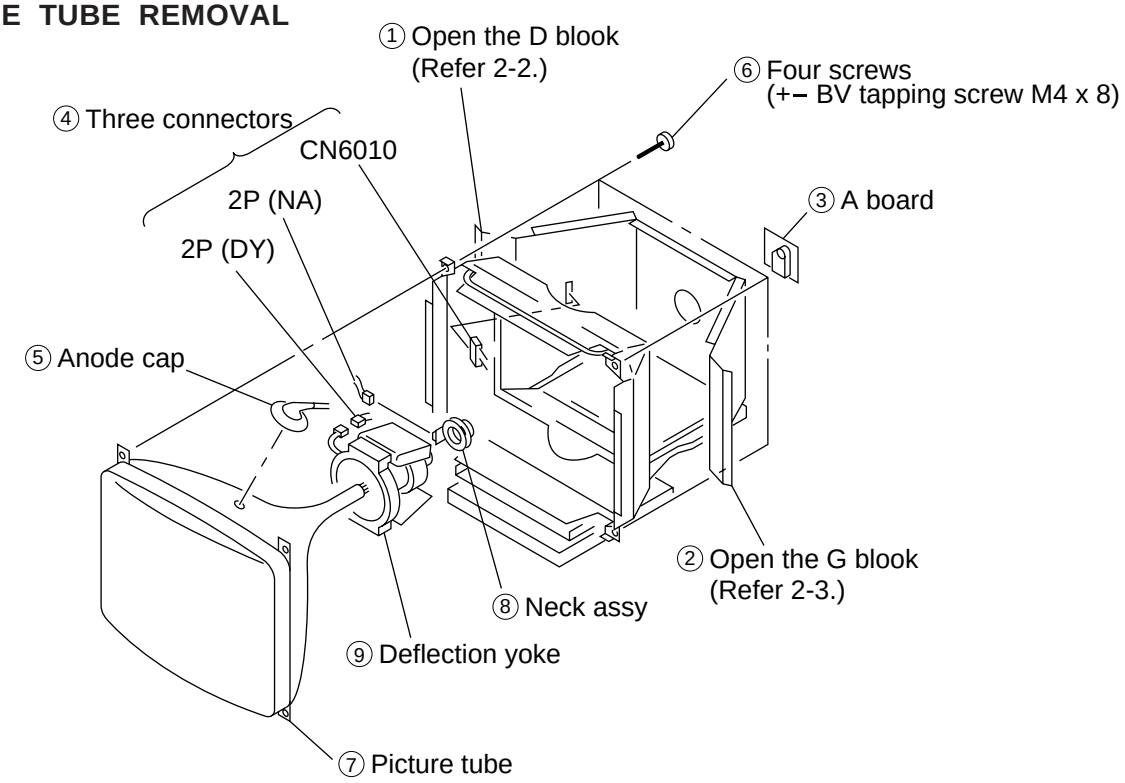

• INSTALLED POSITION OF THE ANODE-CAP

Install the anode cap as shown a figure.

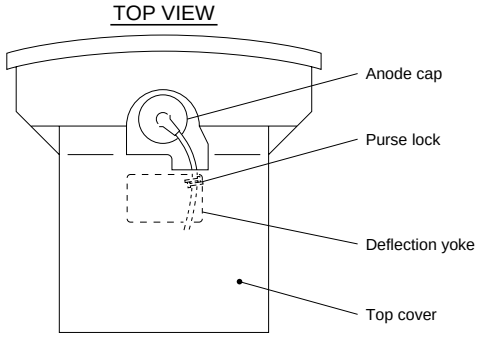

• REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

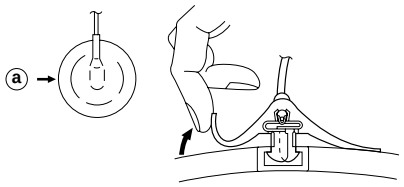

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

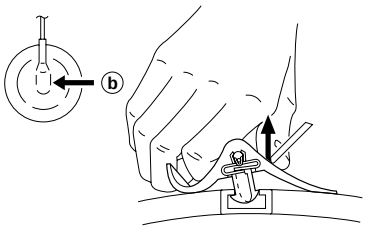

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

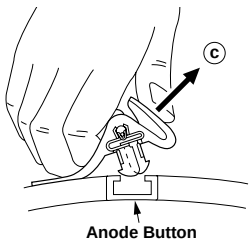

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ⓒ.

• HOW TO HANDLE AN ANODE-CAP

① Don't hurt the surface of anode-caps with shartp shaped material!
② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

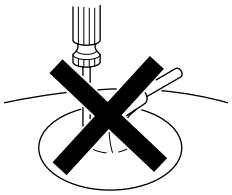

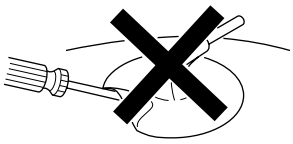

SECTION 3
SAFETY RELATED ADJUSTMENT

When replacing or repairing the shown below table, the following operational checks must be performed as a safety precaution against X-rays emissions from the unit.

	Part Replaced (◪)	
HV Regulator Circuit Check	GB board	IC4202 • Mounted GB board
HV Hold-Down Circuit Check	G board	D4220 • Mounted G board • Mounted GB board
Beam Current Protector#1 Circuit Check	G board GB board	D4204,D4206,D4220, R4211,R4212,R4216, R4219 • Mounted G board IC4202 • Mounted GB board
Beam Current Protector#2 Circuit Check	G board	R4222, R4223 • Mounted G board • Mounted GB board
Voltage of 3rd winding of FBT	G board	T4202(FBT) • Mounted G board

Check Condition

Input voltage : 100~120 V AC
Input signal : White dots or Cross Hatch
Controls : BRT and CONT → Minimum
B+ voltage : 193~201 V DC

a) HV Regulator Circuit Check

1) Confirm that the voltage of the pin ⑯ of IC4202 on GB board is within the voltage range shown below.
   Standard: 9.00±0.10 V DC

b) HV Hold-Down Circuit Check

1) Using an external DC power supply, apply the voltage shown below between cathode of D4220 on G board and ground, and confirm that the HV Hold-Down circuit works. (TV Raster disappears)
   Check Condition: Less than $33.8^{+0.0}_{-0.1}$ V DC

c) Beam Current Protector#1 Circuit Check

1) Record the initial regulation value of ABL-SHUTDOWN and using a PC computer, input the "255" for maximum value of resistor.
2) Connect to the Constant Current Jig (A) between pin ⑪ of T4202 (FBT) on G board and ground, and confirm that the Beam Current Protector Circuit works. (TV Raster disappears)
   Check Condition: Less than 1.55 mA

d) Beam Current Protector#2 Circuit Check

Input the initial regulation value of ABL-SHUTDOWN that was recorded c)-1).

1) Shorted between pin ⑪ of IC4202 on GB board and ground.
2) Connect to the Constant Current Jig (A) between pin ⑪ of T4202 (FBT) on G board and ground, and confirm that the Beam Current Protector Circuit works. (TV Raster disappears)
   Check Condition: Less than 1.72 mA

e) Voltage of 3rd winding of FBT

1) Confirm that the voltage of the cathode of D4220 on G board is within the voltage range shown below.
   Satndard: More than 28.0 V DC

SECTION 4
ADJUSTMENTS

z Landing Rough Adjustment

1. Enter the full white signal. (or the full black dots signal).
2. Adjust the contrast to the maximum.
3. Make the screen monogreen.

Note: Off the outputs from R ch and B ch of SG.

4. Adjust the brightness is easy to see with the G2 resistor.
5. Reverse the DY, and adjust coarsely the purity magnet so that a green raster positions in the center of screen.
6. Moving the DY forward, adjust so that an entire screen becomes monogreen.
7. Adjust the tilt of DY, and fix lightly with a clamp.

z Landing Fine Adjustment

1. Put the set inside the Helmholtz coil.
2. Input the single green signal and set the CONT control to MAX.

Note: Set to 1k=300 µA with the signal green signal, and after aging for about 30 minutes, adjust so that it is exactly this value.

3. Before making any adjustment, confirm that respective preadjustment values of the registers listed below have been entered correctly.

LCC K TEMP	100	LCC R TOL	128
LCC K EW C	105	LCC SW7	7
LCC K NS C	0	LCC TEMP	151
LCC K NS	160	LCC VX	#
LCC K NS FOR ROT	64	LCC VY	#
LCC K ROT FOR NS	46	LCC K VY NS	0
LCC K POL	255	LCC P TOL	128
LCC WO	128		

#=Input values in time adjustments

Also, confirm that “LCC NS=LCC LT=LCC LB=LCC RB=LCC RT=128”

4. Send the “LCC READ” command of the ECS.
   If the ECS command cannot be used, execute the status reading and VX, VY and V TEMP values may be entered to “LCC VX”, “LCC VY” and “LCC TEMP” respectively.
5. Execute the service saving.
6. Demagnetize the metal part of the chassis with the hand degausser and coil degausser, and the CRT surface with the hand degausser.
   Input AC 230V to AC IN, turn on and off the power to perform auto degaussing. (Perform auto degaussing by setting “MON CON REG 2”=152. Return to the original value after use.)
   Demagnetize the CRT surface with the hand degausser again.

Note: Hand degauss must be used on stand-by or power-off condition.
This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

7. Attach the wobbling coil to the designated part of the CRT neck.
8. Attach the sensor of the landing adjustment unit on the CRT surface.
9. Adjust the DY position and purity, and the DY tilt, and landing of the center and 4 corners with the landing checker.

Note:
(1) Adjust in s non-magnetic field. BV=35uT.
(2) If adjusting in a magnetic fields, add the shift from the non-magnetic field in your estimation.

<Specification>

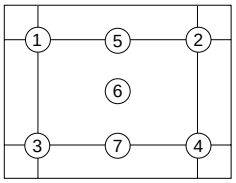

Adjust the green of corners 1 to 4, and center 6 to ±5 µm, and red and blue to within ±7 µm of green, and the difference between red and blue to within ±10 µm.
Adjust the green of 5 and 7 to within ±10 µm, and red and blue to within ±7 µm of green, and the difference between red and blue to within ±10 µm.

(Set each corner to 1st frame of the crosshatch.)

10. For the up/down and left/right swing, swing the DY and insert a wedge so that the up and down pins are equal at the top and bottom and the horizontal trapezoid is equal at the left and right. Insert the wedge firmly so that the DY does not shake.
11. Check the landing of each corner, and if they do not satisfy the specification, paste a Disk-Mg onto the funnel and adjust.

Note:
(1) Do not paste more than 2 magnets to one corner.
(2) Paste within 80 to 100 mm from the DY on the diagonal line of the magnet.
(3) If using the magnet, be sure to demagnetize with the hand degausser and check.
(4) If the specification cannot be satisfied though the adjustment of 11 was made, the following adjustment may be made.
   a) Adjust the “LCC xx” register that corresponds to the part to be adjusted. (See the following figure)

Note : “LCC NS” =108~148
except for “LCC NS”=114~142

   b) Execute the service saving.

“LCC LT”	“LCC NS”	“LCC RT”
“LCC LB”	“LCC NS”	“LCC RB”

(5) If performing a manual degaussing after adjustment of “LCC xx”, set “LCC xx” to 128 (of “LCC SW” to 0).
(After degaussing, return the adjustment value to original value.)

12. Remove the sensor and wobbling coil.
13. Switch the signal to R.G.B., and check that each color is pure.
14. Check that the DY is not tilting, and fix the purity Mg with a white pen.

Run the service software and then follow the instruction.

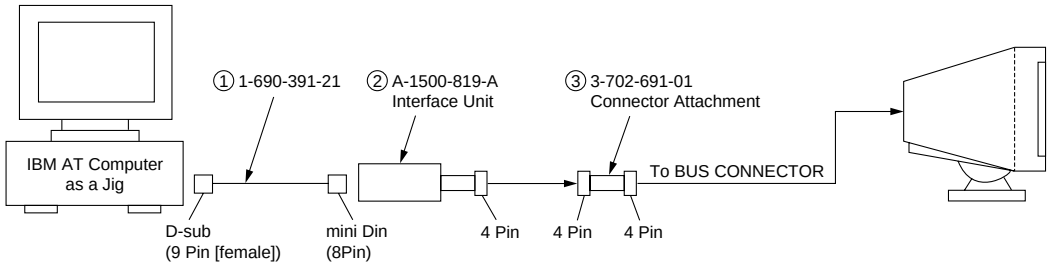

*The parts above (①～③) are necessary for DAS adjustment.

z Convergence Rough Adjustment

(1) Receive an image of the white crosshatch signals (white lines on black).
(2) Place the protrusions of the 6-fold poles magnet attached to the CRT neck upon each other.
(3) Make rough adjustment of the H direction convergence by using H. STAT VR (left side of the video block).
(4) Make a rough adjustment of the V direction convergence by using "V. STAT".

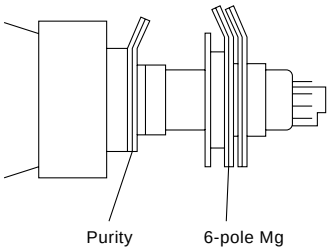

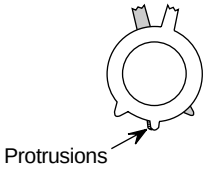

Fig. 1

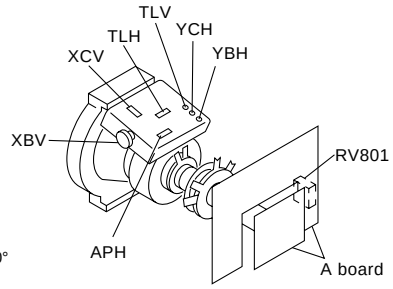

Fig. 2



※ Set so that the protruding parts of the 2 magnet rings agree with each other.

Fig. 3

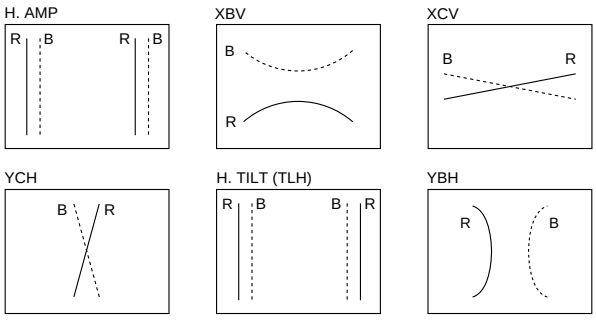

z Convergence Specification

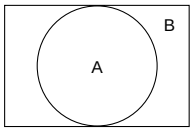

MODE	7	2,3,4,5,6	1,8,9
A	0.24 mm	0.28 mm	0.28 mm
B	0.32 mm	0.36 mm	0.40 mm

z White Balance Adjustment Specification

(1) 9300K
x = 0.283 ± 0.008
y = 0.298 ± 0.008
(2) 6500K
x = 0.313 ± 0.008
y = 0.329 ± 0.008
(3) 5000K
x = 0.346 ± 0.008
y = 0.359 ± 0.008

z Vertical and Horizontal Position and Size Specification

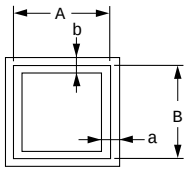

MODE	4	other mode
a	3.0 mm	4.4 mm
b	3.8 mm	4.4 mm

MODE	1,3	2	4,5,8,9	6,7
A	395 mm	370 mm	474 mm	474 mm
B	296 mm	296 mm	266 mm	296 mm

z Focus adjustment

Adjust the focus volume 1 and 2 for the optimum focus.

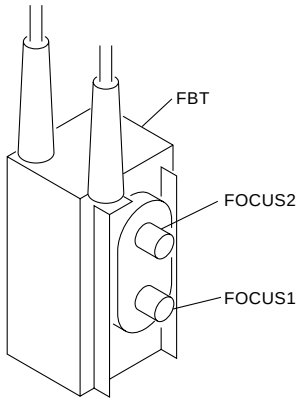

SECTION 6
EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

6-1. CHASSIS

▲ 7-685-647-79 +BVTP 3X10
☐ 7-685-663-71 +BVTP 4X16
○ 7-682-548-04 +–BV TAPPING SCREW M3X8

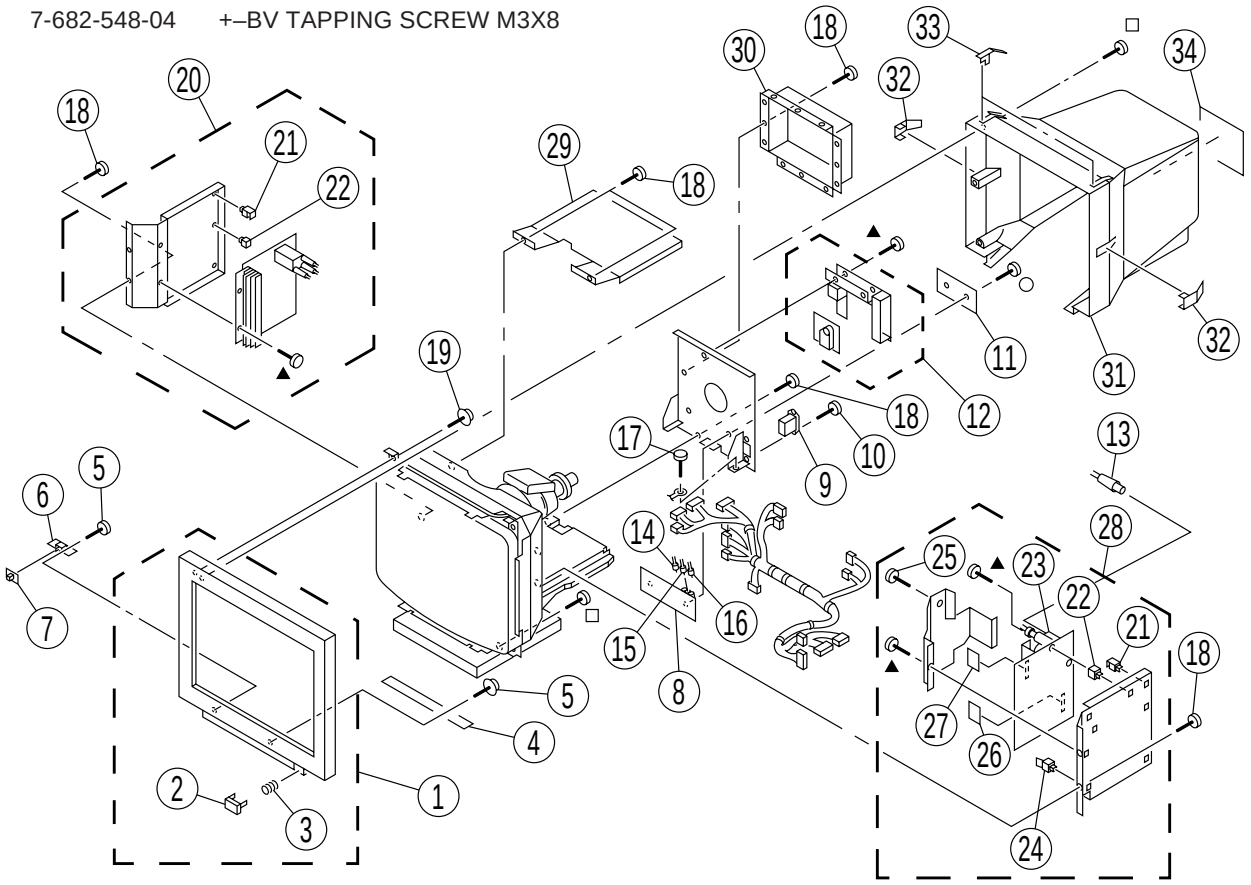

REF.NO.		PART NO.	DESCRIPTION	REMARK
1		*X-4034-602-1	BEZEL ASSY	2, 3
2		*4-055-556-41	BUTTON, POWER	
3		4-042-593-01	SPRING, COMPRESSION	
4		*8-933-217-00	CONTROL BLOCK BOARD (H1 BOARD,COMPLETE)	
5		4-029-432-01	SCREW (3X12), (+) BVWHTP	
6		*8-933-218-00	INPUT SW BOARD (H2 BOARD, COMPLETE)	
7		4-055-558-11	COVER, SLIDE SWITCH	
8		*8-933-216-00	M BOARD, COMPLETE	
9	⚠	1-251-382-12	INLET, AC 3P (WITH NOISE FILTE)	
10		4-052-345-01	SCREW, (3X8) (+K), TAPPING	
11		4-055-730-01	LABEL, CONNECTOR	
12		*8-933-200-00	VIDEO AMP MCB ASSY (A BOARD, COMPLETE)	
13		1-900-215-90	CONNECTOR ASSY	
14		*1-777-729-31	CABLE, COAXIAL (B)	
15		*1-777-729-21	CABLE, COAXIAL (G)	
16		*1-777-729-11	CABLE, COAXIAL (R)	
17		4-389-025-01	SCREW (M4) (EXT TOOTH WASHER)	
18		4-381-962-11	SCREW (M4X8), TAPPING, (+-) (BV)	
19		4-046-765-01	SCREW, TAPPING	
20		*8-933-213-00	DEFLECTION MCB ASSY (D BLOCK ASSY)	21, 22
21		*3-701-903-11	HOLDER, PRINTED CIRCUIT BOARD	
22		*4-382-848-01	HOLDER, PRINTED CIRCUIT BOARD	
23	⚠	*X-4034-094-1	TRANSFORMER ASSY, FLYBACK (NX-4202//J1D4)	
24		*3-703-141-00	HOLDER, PRINTED CIRCUIT BOARD	
25		4-382-854-11	SCREW (M3X10), P, SW (+)	
26	⚠	*8-933-220-00	POWER BLOCK MCB (GA BOARD, COMPLETE)	
27	⚠	*8-933-221-00	POWER BLOCK MCB (GB BOARD, COMPLETE)	
28	⚠	*8-933-219-00	POWER BLOCK ASSY (G BLOCK ASSY)	21~27
29		X-4034-379-1	COVER, TOP	
30		*4-055-731-01	SHIELD, VIDEO	
31		*4-055-559-41	CABINET	
32		*4-055-563-41	COVER (S), SCREW	
33		*4-055-562-41	COVER (T), SCREW	
34		*4-059-245-01	LABEL, INFORMATION	

6-2. PICTURE TUBE

△ 7-682-562-04 +BV TT 4X10
☐ 7-685-663-71 +BVTP 4X16

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

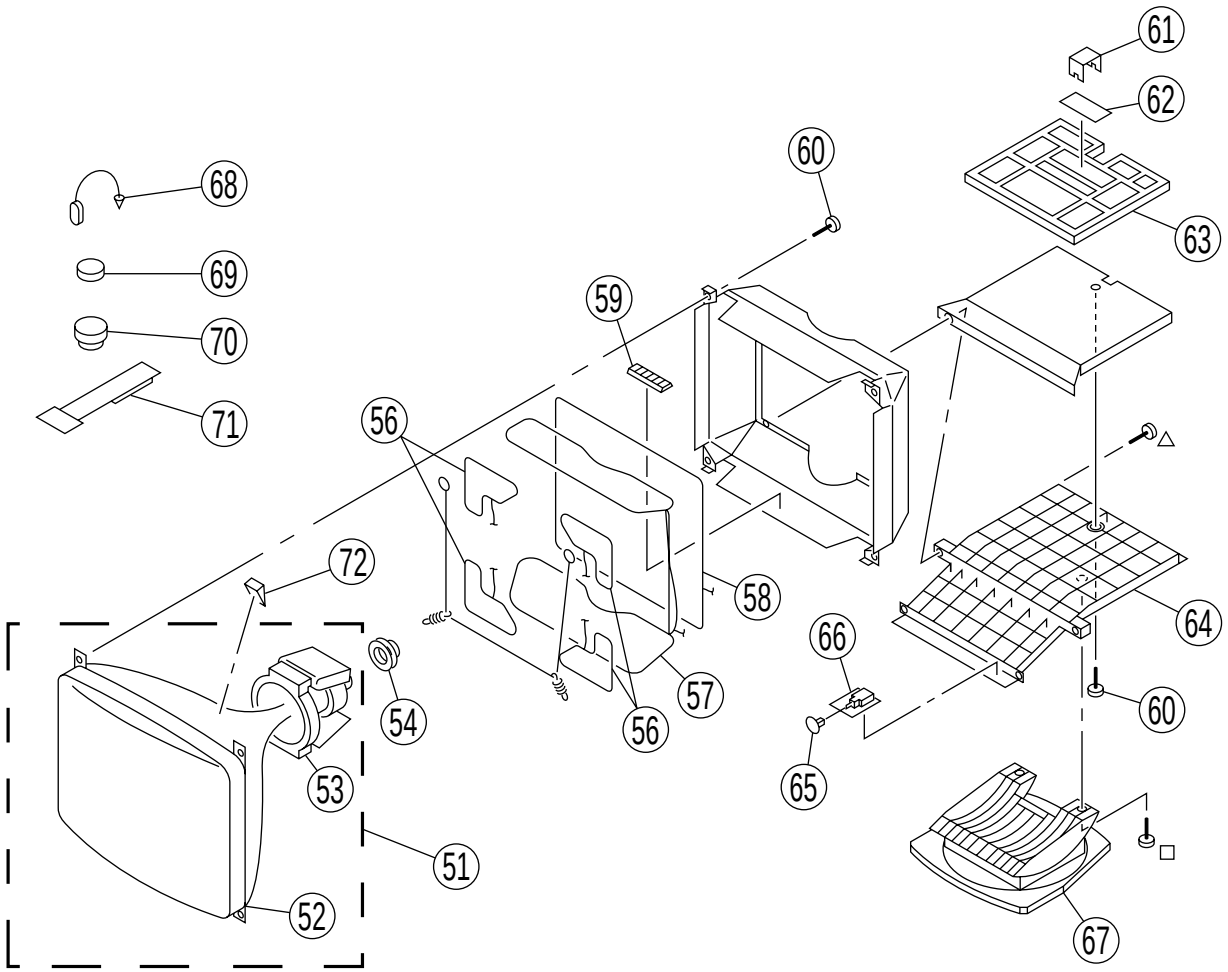

REF.NO.	PART NO.	DESCRIPTION	REMARK
51	⚠8-733-002-80	ITC ASSY (24FIF-R1)	52, 53
52	⚠8-733-002-05	PICTURE TUBE (24FIF)	
53	⚠8-451-481-11	DEFLECTION YOKE (Y24FIK-M)	
54	⚠8-453-013-12	NECK ASSY, PICTURE TUBE (NA298-M)	
56	⚠1-415-969-11	COIL, LANDING CORRECTION	
57	⚠1-415-970-11	COIL, DEGAUSS	
58	⚠1-415-968-11	COIL, LANDING CORRECTION (NS)	
59	4-055-571-01	SUPPORT, CRT	
60	4-381-962-11	SCREW (M4X8),TAPPING,(+-) (BV)	
61	*4-055-760-01	SHIELD (L)	
62	*8-933-214-00	LCC MCB (L BOARD, COMPLETE)	
63	*4-055-736-11	BRACKET, BOTTOM	
64	*4-055-568-41	COVER, BOTTOM	
65	4-031-646-01	SHAFT	
66	*8-933-215-00	AC SW BOARD (J BOARD, COMPLETE)	
67	*X-4034-073-1	STAND ASSY	
68	4-308-870-00	CLIP, LEAD WIRE	
69	1-452-032-00	MAGNET, DISK ; 10mmϕ	
70	1-452-094-00	MAGNET, ROTATABLE DISK ; 15mmϕ	
71	X-4030-584-1	PERMALLOY ASSY, CORRECTION	
72	4-040-897-01	SPACER, DY	

6-3. PACKING MATERIALS

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

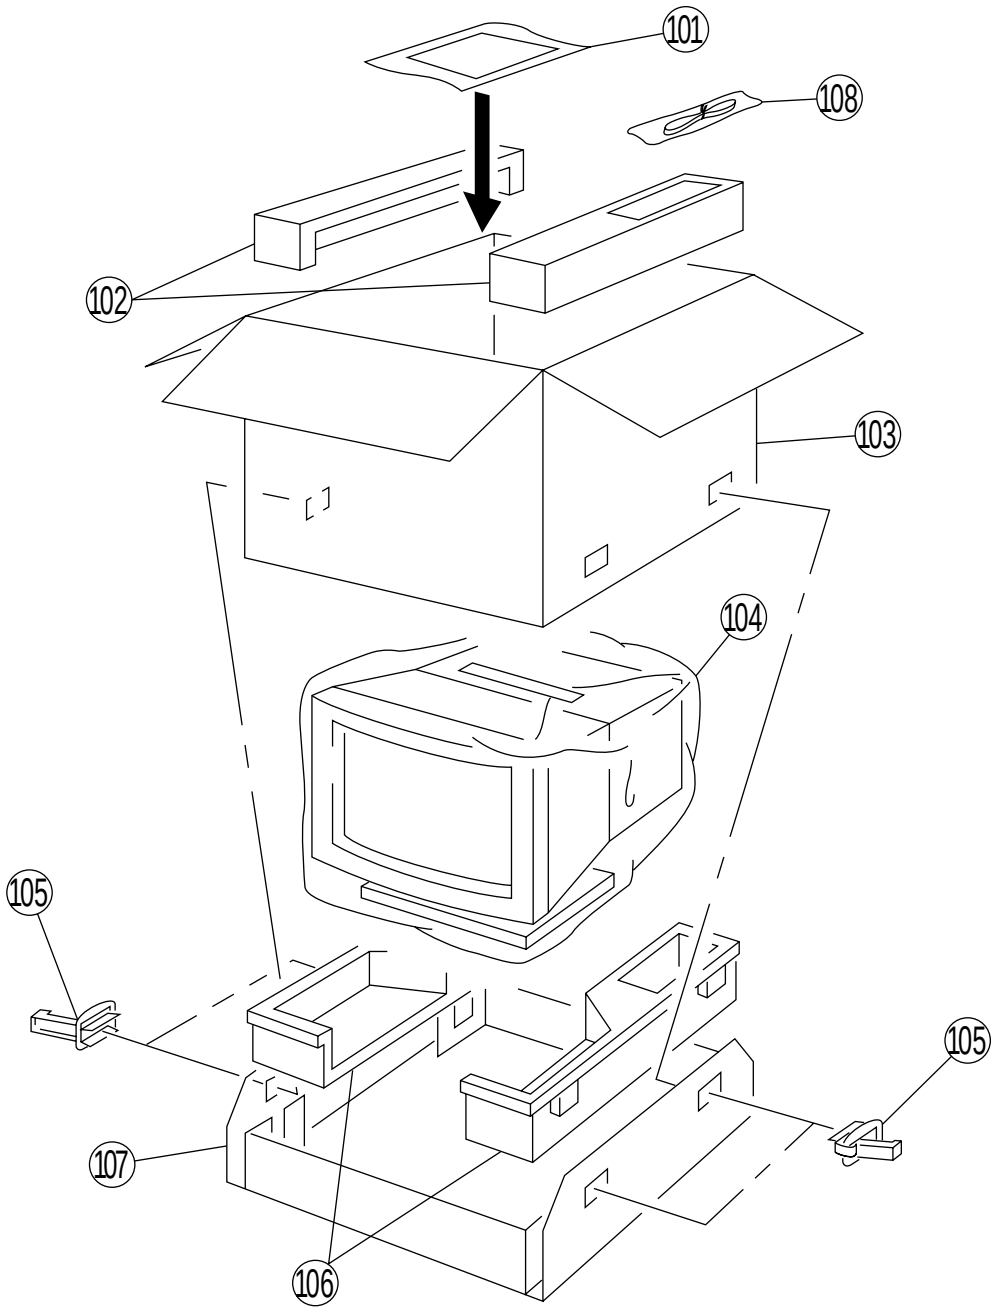

REF.NO.	PART NO.	DESCRIPTION	REMARK
101	*3-860-321-11	MANUAL, INSTRUCTION	
102	*4-055-440-01	CUSHION (UPPER) (ASSY)	
103	*4-059-408-01	INDIVIDUAL CARTON	
104	*4-396-065-21	BAG, PROTECTION	
105	*4-396-077-01	JOINT	
106	*4-055-441-01	CUSHION (LOWER) (ASSY)	
107	*4-055-439-01	TRAY	
108	⚠1-765-717-11	CORD SET, POWER (10A/250V)	

SECTION 7
ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

The components identified by ⧓ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS
• All resistors are in ohms
• F : nonflammable

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
• CAPACITORS
MF : µF
• COILS
MMH : mH

REF.NO.	PART NO.	DESCRIPTION			REMARK
*	8-933-200-00	VIDEO AMP MCB ASSY (A BOARD, ********** COMPLETE) **********			
	4-382-854-11	SCREW (M3X10), P, SW (+) (IC1202, IC1302, IC1402, IC1804, IC1805, IC1806)			
		<CAPACITOR>			
C1101	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1102	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1103	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1104	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1105	1-126-804-11	ELECT	100MF	20%	35V
C1106	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1107	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C1108	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C1109	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C1110	1-136-173-00	FILM	0.47MF	5%	50V
C1111	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1112	1-107-823-11	CERAMIC CHIP	0.47MF	10%	16V
C1113	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1114	1-107-823-11	CERAMIC CHIP	0.47MF	10%	16V
C1115	1-109-982-11	CERAMIC CHIP	1MF	10%	10V
C1116	1-109-982-11	CERAMIC CHIP	1MF	10%	10V
C1117	1-107-823-11	CERAMIC CHIP	0.47MF	10%	16V
C1118	1-107-823-11	CERAMIC CHIP	0.47MF	10%	16V
C1119	1-107-823-11	CERAMIC CHIP	0.47MF	10%	16V
C1120	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1201	1-126-401-11	ELECT CHIP	1MF	20%	50V
C1202	1-164-299-11	CERAMIC CHIP	0.22MF	10%	25V
C1203	1-107-906-11	ELECT	10MF	20%	50V
C1204	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1205	1-107-906-11	ELECT	10MF	20%	50V
C1206	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1207	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1208	1-107-909-11	ELECT	47MF	20%	35V
C1209	1-107-909-11	ELECT	47MF	20%	35V
C1210	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1211	1-107-909-11	ELECT	47MF	20%	35V
C1213	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1214	1-163-141-00	CERAMIC CHIP	0.001MF	5%	50V
C1218	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1219	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1220	1-126-804-11	ELECT	100MF	20%	35V
C1221	1-126-804-11	ELECT	100MF	20%	35V
C1222	1-164-299-11	CERAMIC CHIP	0.22MF	10%	25V
C1223	1-126-402-11	ELECT CHIP	2.2MF	20%	50V
C1224	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C1225	1-107-934-11	ELECT	220MF	20%	100V
C1226	1-216-295-91	CONDUCTOR, CHIP			
C1227	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1228	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1230	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C1232	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1233	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1237	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C1239	1-107-906-11	ELECT	10MF	20%	50V
C1240	1-107-906-11	ELECT	10MF	20%	50V
C1241	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1242	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1243	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1244	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C1245	1-163-220-11	CERAMIC CHIP	3PF	0.25PF	50V
C1246	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1247	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C1249	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C1250	1-163-018-00	CERAMIC CHIP	0.0056MF	10%	50V
C1251	1-104-760-11	CERAMIC CHIP	0.047MF	10%	50V
C1252	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1253	1-163-257-11	CERAMIC CHIP	180PF	5%	50V
C1255	1-163-245-11	CERAMIC CHIP	56PF	5%	50V
C1257	1-163-085-00	CERAMIC CHIP	2PF	0.25PF	50V
C1301	1-126-401-11	ELECT CHIP	1MF	20%	50V
C1302	1-164-299-11	CERAMIC CHIP	0.22MF	10%	25V
C1303	1-107-906-11	ELECT	10MF	20%	50V
C1304	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1305	1-107-906-11	ELECT	10MF	20%	50V
C1306	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1307	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1308	1-107-909-11	ELECT	47MF	20%	35V
C1309	1-107-909-11	ELECT	47MF	20%	35V
C1310	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1311	1-107-909-11	ELECT	47MF	20%	35V
C1313	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V

A

REF.NO.	PART NO.	DESCRIPTION			REMARK
C1314	1-163-141-00	CERAMIC CHIP	0.001MF	5%	50V
C1318	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1319	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1320	1-126-804-11	ELECT	100MF	20%	35V
C1321	1-126-804-11	ELECT	100MF	20%	35V
C1322	1-164-299-11	CERAMIC CHIP	0.22MF	10%	25V
C1323	1-126-402-11	ELECT CHIP	2.2MF	20%	50V
C1324	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C1325	1-107-934-11	ELECT	220MF	20%	100V
C1326	1-216-295-91	CONDUCTOR, CHIP			
C1327	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1328	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1330	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C1332	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1333	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1337	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C1339	1-107-906-11	ELECT	10MF	20%	50V
C1340	1-107-906-11	ELECT	10MF	20%	50V
C1341	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1342	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1343	1-163-106-00	CERAMIC CHIP	36PF	5%	50V
C1344	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C1345	1-163-220-11	CERAMIC CHIP	3PF	0.25PF	50V
C1346	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1347	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C1349	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C1350	1-163-018-00	CERAMIC CHIP	0.0056MF	10%	50V
C1351	1-104-760-11	CERAMIC CHIP	0.047MF	10%	50V
C1352	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1353	1-163-257-11	CERAMIC CHIP	180PF	5%	50V
C1355	1-163-245-11	CERAMIC CHIP	56PF	5%	50V
C1357	1-163-085-00	CERAMIC CHIP	2PF	0.25PF	50V
C1401	1-126-401-11	ELECT CHIP	1MF	20%	50V
C1402	1-164-299-11	CERAMIC CHIP	0.22MF	10%	25V
C1403	1-107-906-11	ELECT	10MF	20%	50V
C1404	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1405	1-107-906-11	ELECT	10MF	20%	50V
C1406	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1407	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1408	1-107-909-11	ELECT	47MF	20%	35V
C1409	1-107-909-11	ELECT	47MF	20%	35V
C1410	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1411	1-107-909-11	ELECT	47MF	20%	35V
C1413	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1414	1-163-141-00	CERAMIC CHIP	0.001MF	5%	50V
C1418	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1419	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1420	1-126-804-11	ELECT	100MF	20%	35V
C1421	1-126-804-11	ELECT	100MF	20%	35V
C1422	1-164-299-11	CERAMIC CHIP	0.22MF	10%	25V
C1423	1-126-402-11	ELECT CHIP	2.2MF	20%	50V
C1424	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C1425	1-107-934-11	ELECT	220MF	20%	100V
C1426	1-216-295-91	CONDUCTOR, CHIP			
C1427	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1428	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1430	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C1432	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1433	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1437	1-163-092-00	CERAMIC CHIP	9PF	0.25PF	50V
C1439	1-107-906-11	ELECT	10MF	20%	50V
C1440	1-107-906-11	ELECT	10MF	20%	50V
C1441	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1442	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1443	1-163-106-00	CERAMIC CHIP	36PF	5%	50V
C1444	1-104-329-11	CERAMIC CHIP	0.1MF	10%	50V
C1445	1-163-220-11	CERAMIC CHIP	3PF	0.25PF	50V
C1446	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1447	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C1449	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C1450	1-163-018-00	CERAMIC CHIP	0.0056MF	10%	50V
C1451	1-104-760-11	CERAMIC CHIP	0.047MF	10%	50V
C1452	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1453	1-163-257-11	CERAMIC CHIP	180PF	5%	50V
C1509	1-126-804-11	ELECT	100MF	20%	35V
C1510	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1511	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1513	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1515	1-107-932-11	ELECT	47MF	20%	100V
C1516	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1517	1-126-804-11	ELECT	100MF	20%	35V
C1519	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1520	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1521	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1522	1-164-298-11	CERAMIC CHIP	0.15MF	10%	25V
C1523	1-164-298-11	CERAMIC CHIP	0.15MF	10%	25V
C1524	1-164-298-11	CERAMIC CHIP	0.15MF	10%	25V
C1528	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1529	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1530	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1531	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1532	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1533	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1534	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1601	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1602	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1604	1-163-127-00	CERAMIC CHIP	270PF	5%	50V
C1605	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C1606	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1607	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1608	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C1609	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C1610	1-163-241-11	CERAMIC CHIP	39PF	5%	50V
C1611	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C1612	1-216-073-00	METAL GLAZE	10K	5%	1/10W
C1613	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C1705	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1711	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1717	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1721	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1722	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1723	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF.NO.	PART NO.	DESCRIPTION			REMARK
C1728	1-107-906-11	ELECT	10MF	20%	50V
C1729	1-107-906-11	ELECT	10MF	20%	50V
C1730	1-107-906-11	ELECT	10MF	20%	50V
C1740	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1761	1-164-489-11	CERAMIC CHIP	0.22MF	10%	16V
C1762	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1764	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1765	1-128-526-11	ELECT	100MF	20%	10V
C1781	1-109-982-11	CERAMIC CHIP	1MF	10%	10V
C1782	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1783	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1797	1-128-526-11	ELECT	100MF	20%	10V
C1798	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1799	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1800	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C1801	1-163-019-00	CERAMIC CHIP	0.0068MF	10%	50V
C1802	1-163-019-00	CERAMIC CHIP	0.0068MF	10%	50V
C1803	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1804	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1805	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1806	1-163-019-00	CERAMIC CHIP	0.0068MF	10%	50V
C1807	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C1808	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C1809	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1810	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1811	1-107-906-11	ELECT	10MF	20%	50V
C1812	1-164-182-11	CERAMIC CHIP	0.0033MF	10%	100V
C1813	1-107-929-11	ELECT	10MF	20%	100V
C1814	1-107-906-11	ELECT	10MF	20%	50V
C1815	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1816	1-162-114-00	CERAMIC	0.0047MF		2KV
C1817	1-162-114-00	CERAMIC	0.0047MF		2KV
C1818	1-128-528-11	ELECT	470MF	20%	16V
C1819	1-107-939-11	ELECT	1MF	20%	160V
C1820	1-107-939-11	ELECT	1MF	20%	160V
C1821	1-107-939-11	ELECT	1MF	20%	160V
C1822	1-107-925-11	ELECT	1MF	20%	100V
C1823	1-107-925-11	ELECT	1MF	20%	100V
C1824	1-107-925-11	ELECT	1MF	20%	100V
C1825	1-107-906-11	ELECT	10MF	20%	50V
C1826	1-107-906-11	ELECT	10MF	20%	50V
C1827	1-126-804-11	ELECT	100MF	20%	35V
C1828	1-107-906-11	ELECT	10MF	20%	50V
C1829	1-107-906-11	ELECT	10MF	20%	50V
C1830	1-162-318-11	CERAMIC	0.001MF	10%	500V
C1831	1-162-318-11	CERAMIC	0.001MF	10%	500V
C1832	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1833	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C1834	1-107-932-11	ELECT	47MF	20%	100V
C1835	1-162-114-00	CERAMIC	0.0047MF		2KV
C1836	1-163-019-00	CERAMIC CHIP	0.0068MF	10%	50V
C1837	1-163-019-00	CERAMIC CHIP	0.0068MF	10%	50V
C1838	1-163-019-00	CERAMIC CHIP	0.0068MF	10%	50V
C1839	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C1840	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C1841	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C1842	1-162-114-00	CERAMIC	0.0047MF		2KV
C1843	1-107-934-11	ELECT	220MF	20%	100V
C1844	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C1860	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C1861	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C1862	1-163-275-11	CERAMIC CHIP	0.001MF	5%	50V
C1901	1-102-989-00	CERAMIC	68PF	5%	500V
C1902	1-102-989-00	CERAMIC	68PF	5%	500V
C1903	1-102-989-00	CERAMIC	68PF	5%	500V
C1904	1-162-114-00	CERAMIC	0.0047MF		2KV

<CONNECTOR>

CN1001	1-564-523-11	PLUG, CONNECTOR 8P
CN1002*	1-766-179-11	PIN, CONNECTOR (PC BOARD) 2P
CN1003*	1-564-594-21	PLUG, CONNECTOR 15P

<JACK>

CR1901⚠	1-251-116-12	SOCKET, PICTURE TUBE

<DIODE>

D1103	8-719-801-78	DIODE 1SS184
D1104	8-719-404-49	DIODE MA111
D1106	8-719-800-76	DIODE 1SS226
D1107	8-719-404-49	DIODE MA111
D1108	8-719-800-76	DIODE 1SS226
D1201	8-719-404-49	DIODE MA111
D1209	8-719-157-93	ZENER DIODE RD3.0SB2
D1211	8-719-404-49	DIODE MA111
D1301	8-719-404-49	DIODE MA111
D1309	8-719-157-93	ZENER DIODE RD3.0SB2
D1311	8-719-404-49	DIODE MA111
D1401	8-719-404-49	DIODE MA111
D1409	8-719-157-93	ZENER DIODE RD3.0SB2
D1503	8-719-404-49	DIODE MA111
D1508	8-719-800-76	DIODE 1SS226
D1509	8-719-800-76	DIODE 1SS226
D1510	8-719-800-76	DIODE 1SS226
D1602	8-719-404-49	DIODE MA111
D1603	8-719-404-49	DIODE MA111
D1604	8-719-104-34	DIODE 1S2836
D1606	8-719-404-49	DIODE MA111
D1607	8-719-404-49	DIODE MA111
D1610	8-719-404-49	DIODE MA111
D1611	8-719-404-49	DIODE MA111
D1612	8-719-404-49	DIODE MA111
D1613	8-719-404-49	DIODE MA111
D1614	8-719-404-49	DIODE MA111
D1701	8-719-800-76	DIODE 1SS226
D1702	8-719-800-76	DIODE 1SS226
D1703	8-719-800-76	DIODE 1SS226
D1704	8-719-404-49	DIODE MA111
D1705	8-719-801-78	DIODE 1SS184
D1706	8-719-404-49	DIODE MA111

A

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
D1707	8-719-404-49	DIODE MA111	
D1801	8-719-404-49	DIODE MA111	
D1802	8-719-404-49	DIODE MA111	
D1803	8-719-404-49	DIODE MA111	
D1804	8-719-404-49	DIODE MA111	
D1805	8-719-404-49	DIODE MA111	
D1806	8-719-052-12	DIODE 1SS376TE-17	
D1807	8-719-052-12	DIODE 1SS376TE-17	
D1808	8-719-052-12	DIODE 1SS376TE-17	
D1809	8-719-052-12	DIODE 1SS376TE-17	
D1810	8-719-052-12	DIODE 1SS376TE-17	
D1811	8-719-052-12	DIODE 1SS376TE-17	
D1812	8-719-052-12	DIODE 1SS376TE-17	
D1813	8-719-052-12	DIODE 1SS376TE-17	
D1814	8-719-052-12	DIODE 1SS376TE-17	
D1815	8-719-801-78	DIODE 1SS184	
		<FERRITE BEAD>	
FB1201	1-412-363-21	INDUCTOR 0UH	
FB1301	1-412-363-21	INDUCTOR 0UH	
FB1401	1-412-363-21	INDUCTOR 0UH	
FB1801	1-412-390-21	INDUCTOR CHIP 0UH	
FB1802	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB1803	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB1804	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB1901	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
		<FILTER>	
FL1801	1-236-164-11	ENCAPSULATED COMPONENT	
FL1802	1-236-164-11	ENCAPSULATED COMPONENT	
		<IC>	
IC1101	8-759-044-65	IC M62352FP	
IC1102	8-759-060-00	IC BA10324AF	
IC1103	8-759-044-65	IC M62352FP	
IC1104	8-759-060-00	IC BA10324AF	
IC1201	8-759-399-68	IC M52048SP	
IC1202	8-759-434-36	IC VP301	
IC1301	8-759-399-68	IC M52048SP	
IC1302	8-759-434-36	IC VP301	
IC1401	8-759-399-68	IC M52048SP	
IC1402	8-759-434-36	IC VP301	
IC1503	8-759-981-48	IC TL082M	
IC1509	8-759-981-48	IC TL082M	
IC1510	8-759-981-48	IC TL082M	
IC1511	8-759-981-48	IC TL082M	
IC1512	8-759-932-67	IC BU4053BCF	
IC1513	8-759-981-48	IC TL082M	
IC1514	8-759-981-48	IC TL082M	
IC1601	8-759-239-23	IC TC74HC86AF	
IC1602	8-759-032-20	IC MC74HC32AF	
IC1603	8-759-008-82	IC MC14013BF	
IC1604	8-759-032-11	IC MC74HC04AF	
IC1605	8-759-008-82	IC MC14013BF	
IC1606	8-759-925-90	IC SN74HC74ANS	
IC1701	8-759-008-75	IC MC14002BF	
IC1703	8-759-032-41	IC MC74HC157AF	
IC1801	8-759-347-17	IC LA7890	
IC1803	8-759-100-96	IC UPC4558G2	
IC1804	8-759-701-65	IC NJM79M05FA	
IC1805	8-759-088-08	IC UPC7812AHF	
IC1806	8-759-231-53	IC TA7805S	
		<JACK>	
J1201	1-568-547-11	JACK, MINIATUER PIN	
J1301	1-568-547-11	JACK, MINIATUER PIN	
J1401	1-568-547-11	JACK, MINIATUER PIN	
		<COIL>	
L1203	1-412-735-11	INDUCTOR 82NH	
L1303	1-412-735-11	INDUCTOR 82NH	
L1403	1-410-180-51	INDUCTOR CHIP 0.1UH	
L1901	1-410-180-51	INDUCTOR CHIP 0.1UH	
L1902	1-410-180-51	INDUCTOR CHIP 0.1UH	
L1903	1-410-181-51	INDUCTOR CHIP 0.12UH	
		<IC LINK>	
PS1801 ⚠	1-533-590-31	LINK, IC 1A/90V AC, 60V DC	
PS1802 ⚠	1-533-590-31	LINK, IC 1A/90V AC, 60V DC	
PS1803 ⚠	1-533-592-31	LINK, IC 1.6A/90V AC, 60V DC	
		<TRANSISTOR>	
Q1103	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1105	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1201	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q1202	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q1203	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1204	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1205	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q1206	8-729-129-54	TRANSISTOR 2SC2954	
Q1214	8-729-105-68	TRANSISTOR 2SC3356-K	
Q1215	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1216	8-729-105-68	TRANSISTOR 2SC3356-K	
Q1301	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q1302	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q1303	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1304	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1305	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q1306	8-729-129-54	TRANSISTOR 2SC2954	
Q1314	8-729-105-68	TRANSISTOR 2SC3356-K	
Q1315	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1316	8-729-105-68	TRANSISTOR 2SC3356-K	
Q1401	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q1402	8-729-112-65	TRANSISTOR 2SA1462-Y33	
Q1403	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1404	8-729-120-28	TRANSISTOR 2SC1623-L5L6	

A

REF.NO.	PART NO.	DESCRIPTION	REMARK
Q1405	8-729-107-31	TRANSISTOR 2SC3545-T43	
Q1406	8-729-129-54	TRANSISTOR 2SC2954	
Q1414	8-729-105-68	TRANSISTOR 2SC3356-K	
Q1415	8-729-143-46	TRANSISTOR 2SC3356-R24	
Q1505	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1601	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1701	8-729-144-85	TRANSISTOR 2SK1133	
Q1801	8-729-027-71	TRANSISTOR 2SC4913	
Q1802	8-729-027-71	TRANSISTOR 2SC4913	
Q1803	8-729-027-23	TRANSISTOR DTA114EKA-T146	
Q1804	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1805	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q1806	8-729-030-42	TRANSISTOR 2SK1849-TB	
Q1807	8-729-104-27	TRANSISTOR 2SC2780-NK	
Q1808	8-729-216-22	TRANSISTOR 2SA1162-G	
		<RESISTOR>	
R1101	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1102	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1103	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1104	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1107	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1108	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1111	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1113	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1115	1-216-667-11	METAL CHIP 4.7K 0.50%	1/10W
R1117	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1118	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1119	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1120	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1121	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R1123	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R1124	1-216-677-11	METAL CHIP 12K 0.50%	1/10W
R1125	1-216-097-91	METAL GLAZE 100K 5%	1/10W
R1127	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R1128	1-216-693-11	METAL CHIP 56K 0.50%	1/10W
R1131	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1133	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1134	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1135	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1136	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R1137	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1138	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1139	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1140	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1141	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1142	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1143	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1144	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1145	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1146	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1147	1-216-091-00	METAL GLAZE 56K 5%	1/10W
R1148	1-216-033-00	METAL GLAZE 220 5%	1/10W
R1149	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1150	1-216-091-00	METAL GLAZE 56K 5%	1/10W
R1151	1-216-035-00	METAL GLAZE 270 5%	1/10W
R1152	1-216-097-91	METAL GLAZE 100K 5%	1/10W
R1153	1-216-113-00	METAL GLAZE 470K 5%	1/10W
R1154	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R1155	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R1156	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1157	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1158	1-216-063-91	METAL GLAZE 3.9K 5%	1/10W
R1159	1-216-033-00	METAL GLAZE 220 5%	1/10W
R1160	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R1161	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R1162	1-216-091-00	METAL GLAZE 56K 5%	1/10W
R1163	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R1164	1-216-107-00	METAL GLAZE 270K 5%	1/10W
R1165	1-216-091-00	METAL GLAZE 56K 5%	1/10W
R1166	1-216-035-00	METAL GLAZE 270 5%	1/10W
R1167	1-216-113-00	METAL GLAZE 470K 5%	1/10W
R1168	1-216-091-00	METAL GLAZE 56K 5%	1/10W
R1169	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R1170	1-216-043-91	METAL GLAZE 560 5%	1/10W
R1171	1-216-025-91	METAL GLAZE 100 5%	1/10W
R1201	1-216-017-91	METAL GLAZE 47 5%	1/10W
R1202	1-216-017-91	METAL GLAZE 47 5%	1/10W
R1203	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R1204	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R1205	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R1206	1-216-033-00	METAL GLAZE 220 5%	1/10W
R1207	1-216-001-00	METAL GLAZE 10 5%	1/10W
R1208	1-216-033-00	METAL GLAZE 220 5%	1/10W
R1209	1-216-041-00	METAL GLAZE 470 5%	1/10W
R1210	1-216-017-91	METAL GLAZE 47 5%	1/10W
R1211	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R1212	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R1213	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R1214	1-216-041-00	METAL GLAZE 470 5%	1/10W
R1215	1-216-009-00	METAL GLAZE 22 5%	1/10W
R1216	1-216-009-00	METAL GLAZE 22 5%	1/10W
R1217	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R1218	1-216-041-00	METAL GLAZE 470 5%	1/10W
R1219	1-216-041-00	METAL GLAZE 470 5%	1/10W
R1220	1-216-041-00	METAL GLAZE 470 5%	1/10W
R1221	1-216-105-91	METAL GLAZE 220K 5%	1/10W
R1222	1-216-663-11	METAL CHIP 3.3K 0.50%	1/10W
R1223	1-216-635-11	METAL CHIP 220 0.50%	1/10W
R1224	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R1225	1-216-295-91	CONDUCTOR, CHIP	
R1226	1-216-663-11	METAL CHIP 3.3K 0.50%	1/10W
R1227	1-216-679-11	METAL CHIP 15K 0.50%	1/10W
R1228	1-216-679-11	METAL CHIP 15K 0.50%	1/10W
R1229	1-216-681-11	METAL CHIP 18K 0.50%	1/10W
R1236	1-216-657-11	METAL CHIP 1.8K 0.50%	1/10W
R1240	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R1241	1-216-635-11	METAL CHIP 220 0.50%	1/10W
R1242	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R1243	1-216-033-00	METAL GLAZE 220 5%	1/10W
R1244	1-216-063-91	METAL GLAZE 3.9K 5%	1/10W

A

REF.NO.	PART NO.	DESCRIPTION			REMARK
R1245	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W
R1246	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R1247	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1248	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1249	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1250	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W
R1251	1-216-615-11	METAL CHIP	33	0.50%	1/10W
R1253	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1254	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1255	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R1256	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1257	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1259	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1260	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R1261	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1262	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R1263	1-216-121-91	METAL GLAZE	1M	5%	1/10W
R1264	1-216-660-11	METAL CHIP	2.4K	0.50%	1/10W
R1265	1-216-093-00	METAL GLAZE	68K	5%	1/10W
R1266	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1267	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R1268	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1271	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1301	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1302	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1303	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1304	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1305	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W
R1306	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1307	1-216-001-00	METAL GLAZE	10	5%	1/10W
R1308	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1309	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1310	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1311	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1312	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1313	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1314	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1315	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1316	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1317	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1318	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1319	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1320	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1321	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R1322	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R1323	1-216-635-11	METAL CHIP	220	0.50%	1/10W
R1324	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R1325	1-216-295-91	CONDUCTOR, CHIP			
R1326	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R1327	1-216-679-11	METAL CHIP	15K	0.50%	1/10W
R1328	1-216-679-11	METAL CHIP	15K	0.50%	1/10W
R1329	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R1336	1-216-657-11	METAL CHIP	1.8K	0.50%	1/10W
R1339	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1340	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1341	1-216-635-11	METAL CHIP	220	0.50%	1/10W
R1342	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1343	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1344	1-216-063-91	METAL GLAZE	3.9K	5%	1/10W
R1345	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W
R1346	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R1347	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1348	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1349	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1350	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W
R1351	1-216-615-11	METAL CHIP	33	0.50%	1/10W
R1354	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1355	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R1356	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1357	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1359	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1360	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R1361	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1362	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R1363	1-216-121-91	METAL GLAZE	1M	5%	1/10W
R1364	1-216-660-11	METAL CHIP	2.4K	0.50%	1/10W
R1365	1-216-093-00	METAL GLAZE	68K	5%	1/10W
R1366	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1367	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R1368	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1371	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1401	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1402	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1403	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1404	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1405	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W
R1406	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1407	1-216-001-00	METAL GLAZE	10	5%	1/10W
R1408	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1409	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1410	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1411	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1412	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1413	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1414	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1415	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1416	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1417	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1418	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1419	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1420	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1421	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R1422	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R1423	1-216-635-11	METAL CHIP	220	0.50%	1/10W
R1424	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R1425	1-216-295-91	CONDUCTOR, CHIP			
R1426	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R1427	1-216-679-11	METAL CHIP	15K	0.50%	1/10W
R1428	1-216-679-11	METAL CHIP	15K	0.50%	1/10W
R1429	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R1436	1-216-657-11	METAL CHIP	1.8K	0.50%	1/10W
R1439	1-216-049-91	METAL GLAZE	1K	5%	1/10W

A

REF.NO.	PART NO.	DESCRIPTION			REMARK
R1440	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1441	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1442	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1443	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1444	1-216-063-91	METAL GLAZE	3.9K	5%	1/10W
R1445	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W
R1446	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R1447	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1448	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1449	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1450	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W
R1451	1-216-615-11	METAL CHIP	33	0.50%	1/10W
R1454	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1455	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R1456	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1457	1-216-083-00	METAL GLAZE	27K	5%	1/10W
R1459	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1460	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R1461	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1462	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R1463	1-216-121-91	METAL GLAZE	1M	5%	1/10W
R1464	1-216-660-11	METAL CHIP	2.4K	0.50%	1/10W
R1465	1-216-093-00	METAL GLAZE	68K	5%	1/10W
R1466	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1471	1-216-629-11	METAL CHIP	120	0.50%	1/10W
R1502	1-216-649-11	METAL CHIP	820	0.50%	1/10W
R1503	1-216-647-11	METAL CHIP	680	0.50%	1/10W
R1525	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1526	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1531	1-216-025-91	METAL GLAZE	100	5%	1/10W
R1532	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1533	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1534	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1535	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W
R1536	1-216-677-11	METAL CHIP	12K	0.50%	1/10W
R1540	1-216-025-91	METAL GLAZE	100	5%	1/10W
R1541	1-216-025-91	METAL GLAZE	100	5%	1/10W
R1542	1-216-099-00	METAL GLAZE	120K	5%	1/10W
R1601	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1603	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1604	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R1605	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1606	1-216-039-00	METAL GLAZE	390	5%	1/10W
R1607	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R1608	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R1609	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1610	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1611	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R1613	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1615	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1616	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1620	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R1621	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1622	1-216-691-11	METAL CHIP	47K	0.50%	1/10W
R1623	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R1625	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R1626	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1629	1-216-107-00	METAL GLAZE	270K	5%	1/10W
R1701	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1702	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1703	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1707	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1708	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1709	1-216-631-11	METAL CHIP	150	0.50%	1/10W
R1721	1-216-041-00	METAL GLAZE	470	5%	1/10W
R1723	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1725	1-216-025-91	METAL GLAZE	100	5%	1/10W
R1726	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1732	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1733	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1734	1-216-017-91	METAL GLAZE	47	5%	1/10W
R1735	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1736	1-216-025-91	METAL GLAZE	100	5%	1/10W
R1737	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1738	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R1739	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1740	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1741	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R1742	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1743	1-216-109-00	METAL GLAZE	330K	5%	1/10W
R1744	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R1745	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1746	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1747	1-412-011-31	INDUCTOR CHIP		27UH	
R1748	1-216-639-11	METAL CHIP	330	0.50%	1/10W
R1749	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1750	1-216-001-00	METAL GLAZE	10	5%	1/10W
R1751	1-216-646-11	METAL CHIP	620	0.50%	1/10W
R1752	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1753	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1754	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1755	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1757	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R1758	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R1759	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R1760	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R1773	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1774	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1775	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1776	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1787	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1788	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1789	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1790	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1791	1-216-013-00	METAL GLAZE	33	5%	1/10W
R1801	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R1802	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R1803	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R1804	1-216-673-11	METAL CHIP	8.2K	0.50%	1/10W
R1805	1-216-095-00	METAL GLAZE	82K	5%	1/10W
R1806	1-218-762-11	METAL CHIP	270K	0.50%	1/10W
R1807	1-216-095-00	METAL GLAZE	82K	5%	1/10W

A M

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION			REMARK
R1808	1-216-095-00	METAL GLAZE	82K	5%	1/10W
R1810	1-218-762-11	METAL CHIP	270K	0.50%	1/10W
R1811	1-218-762-11	METAL CHIP	270K	0.50%	1/10W
R1812	1-216-117-00	METAL GLAZE	680K	5%	1/10W
R1814	1-216-095-00	METAL GLAZE	82K	5%	1/10W
R1815	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R1816	1-208-612-11	METAL OXIDE	10M	5%	1W
R1817	1-208-612-11	METAL OXIDE	10M	5%	1W
R1818	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1819	1-208-612-11	METAL OXIDE	10M	5%	1W
R1820	1-216-295-91	CONDUCTOR, CHIP			
R1821	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1822	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R1823	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R1824	1-208-610-11	METAL OXIDE	2M	5%	1W
R1825	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1826	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1827	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R1828	1-208-610-11	METAL OXIDE	2M	5%	1W
R1829	1-216-025-91	METAL GLAZE	100	5%	1/10W
R1830	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1831	1-249-417-11	CARBON	1K	5%	1/4W F
R1832	1-216-011-00	METAL GLAZE	27	5%	1/10W
R1833	1-215-896-00	METAL OXIDE	4.7K	5%	2W F
R1834	1-215-875-11	METAL OXIDE	10K	5%	1W F
R1835	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1836	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1837	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1838	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1839	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1840	1-216-009-00	METAL GLAZE	22	5%	1/10W
R1841	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1842	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1843	1-216-113-00	METAL GLAZE	470K	5%	1/10W
R1844	1-249-409-11	CARBON	220	5%	1/4W F
R1845	1-202-842-11	SOLID	220K	20%	1/2W
R1847	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R1849	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1850	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R1851	1-208-612-11	METAL OXIDE	10M	5%	1W
R1852	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R1853	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1854	1-208-610-11	METAL OXIDE	2M	5%	1W
R1901	1-260-081-11	CARBON	33	5%	1/2W
R1902	1-260-081-11	CARBON	33	5%	1/2W
R1903	1-260-081-11	CARBON	33	5%	1/2W
R1904	1-260-093-11	CARBON	330	5%	1/2W
R1905	1-260-093-11	CARBON	330	5%	1/2W
R1906	1-260-093-11	CARBON	330	5%	1/2W
R1907	1-202-842-11	SOLID	220K	20%	1/2W
R1908	1-202-842-11	SOLID	220K	20%	1/2W
R1909	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1910	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R1911	1-216-049-91	METAL GLAZE	1K	5%	1/10W

<VARIABLE RESISTOR>

RV1801⚠ 1-223-410-21 RES, ADJ, METAL FILM 110M (H.STAT)

<SPARK GAP>

SG1801 1-519-422-11 GAP, SPARK
SG1901 1-519-504-11 GAP, DISCHARGE
SG1902 1-519-504-11 GAP, DISCHARGE
SG1903 1-519-504-11 GAP, DISCHARGE
SG1904 1-519-504-11 GAP, DISCHARGE

SG1905 1-519-504-11 GAP, DISCHARGE
SG1906 1-519-504-11 GAP, DISCHARGE
SG1907 1-519-422-11 GAP, SPARK
SG1908 1-517-499-21 GAP, SPARK

****

* 8-933-216-00 M BOARD, COMPLETE
****

1-533-814-11 TERMINAL BOARD ASSY, I/O

<CAPACITOR>

C2001	1-126-245-11	ELECT	330MF	20%	6.3V
C2002	1-126-794-11	ELECT	4.7MF	20%	50V
C2003	1-126-160-11	ELECT	1MF	20%	50V
C2004	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C2005	1-249-398-11	CARBON	27	5%	1/4W F
C2006	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C2007	1-126-245-11	ELECT	330MF	20%	6.3V
C2008	1-126-160-11	ELECT	1MF	20%	50V
C2009	1-126-160-11	ELECT	1MF	20%	50V
C2010	1-126-177-11	ELECT	100MF	20%	10V
C2011	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C2012	1-126-160-11	ELECT	1MF	20%	50V
C2013	1-126-160-11	ELECT	1MF	20%	50V
C2014	1-126-795-11	ELECT	10MF	20%	50V
C2015	1-126-160-11	ELECT	1MF	20%	50V
C2020	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C2021	1-163-087-00	CERAMIC CHIP	4PF	0.25PF	50V
C2022	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C2023	1-126-794-11	ELECT	4.7MF	20%	50V
C2024	1-126-394-11	ELECT CHIP	10MF	20%	16V
C2025	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C2027	1-126-394-11	ELECT CHIP	10MF	20%	16V

<CONNECTOR>

CN2001 * 1-564-594-41 PLUG, CONNECTOR 15P

<DIODE>

D2001 8-719-404-49 DIODE MA111
D2002 8-719-801-78 DIODE 1SS184

M

REF.NO.	PART NO.	DESCRIPTION	REMARK
D2003	8-719-104-34	DIODE 1S2836	
D2004	8-719-801-78	DIODE 1SS184	
D2005	8-719-104-34	DIODE 1S2836	
D2006	8-719-105-91	ZENER DIODE RD5.6M-B2	
D2007	8-719-105-91	ZENER DIODE RD5.6M-B2	
D2008	8-719-976-99	DIODE DTZ-TT11-5.1B	
D2009	8-719-404-49	DIODE MA111	
D2010	8-719-976-99	ZENER DIODE DTZ-TT11-5.1B	
D2011	8-719-976-99	ZENER DIODE DTZ-TT11-5.1B	
D2012	8-719-800-76	DIODE 1SS226	
D2013	8-719-800-76	DIODE 1SS226	
D2014	8-719-106-23	ZENER DIODE RD7.5M-B2	
D2015	8-719-106-23	ZENER DIODE RD7.5M-B2	
D2016	8-719-056-89	ZENER DIODE UDZ-TE-17-12B	
D2017	8-719-056-89	ZENER DIODE UDZ-TE-17-12B	
D2018	8-719-801-78	DIODE 1SS184	
D2019	8-719-976-99	ZENER DIODE UDZ-TE-17-5.1B	
D2020	8-719-976-99	ZENER DIODE UDZ-TE-17-5.1B	
D2021	8-719-800-76	DIODE 1SS226	
D2100	8-719-105-91	ZENER DIODE RD5.6M-B2	
D2111	8-719-404-49	DIODE MA111	
		<FILTER>	
FL2001	1-236-058-11	ENCAPSULATED COMPONENT	
FL2002	1-236-058-11	ENCAPSULATED COMPONENT	
FL2003	1-236-058-11	ENCAPSULATED COMPONENT	
		<IC>	
IC2001	8-759-049-11	IC SN74ALS157ANS	
IC2002	8-759-442-20	IC 24LC21A/SN	
IC2003	8-759-521-15	IC MAX232CWE	
IC2004	8-759-011-65	IC MC74HC4053F	
		<JACK>	
J2006	1-568-547-11	JACK, MINIATUER PIN	
J2007	1-568-547-11	JACK, MINIATUER PIN	
J2008	1-568-547-11	JACK, MINIATUER PIN	
		<TRANSISTOR>	
Q2001	8-729-162-13	TRANSISTOR 2SC1621-B3	
Q2002	8-729-901-00	TRANSISTOR DTC124EK	
Q2003	8-729-162-13	TRANSISTOR 2SC1621-B3	
Q2004	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2005	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q2006	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2007	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q2008	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
		<RESISTOR>	
R2002	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2003	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2004	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2005	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2006	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2007	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2008	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2009	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2010	1-216-009-00	METAL GLAZE 22 5%	1/10W
R2011	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2012	1-216-009-00	METAL GLAZE 22 5%	1/10W
R2013	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2014	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2016	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2017	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2018	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2019	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R2020	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R2021	1-216-089-91	METAL GLAZE 47K 5%	1/10W
R2022	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R2023	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2024	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2027	1-216-039-00	METAL GLAZE 390 5%	1/10W
R2028	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R2029	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2030	1-216-025-91	METAL GLAZE 100 5%	1/10W
R2031	1-216-089-91	METAL GLAZE 47K 5%	1/10W
R2032	1-216-025-91	METAL GLAZE 100 5%	1/10W
R2034	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R2035	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R2037	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R2038	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R2039	1-216-049-91	METAL GLAZE 1K 5%	1/10W
R2040	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2041	1-216-097-91	METAL GLAZE 100K 5%	1/10W
R2048	1-216-089-91	METAL GLAZE 47K 5%	1/10W
R2049	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2050	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2051	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W
R2052	1-216-093-00	METAL GLAZE 68K 5%	1/10W
R2053	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2054	1-216-045-00	METAL GLAZE 680 5%	1/10W
R2055	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W
R2056	1-216-093-00	METAL GLAZE 68K 5%	1/10W
R2057	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2058	1-216-045-00	METAL GLAZE 680 5%	1/10W
R2059	1-216-029-00	METAL GLAZE 150 5%	1/10W
R2060	1-216-029-00	METAL GLAZE 150 5%	1/10W
R2061	1-216-029-00	METAL GLAZE 150 5%	1/10W
R2062	1-216-029-00	METAL GLAZE 150 5%	1/10W
R2063	1-216-029-00	METAL GLAZE 150 5%	1/10W
R2064	1-216-029-00	METAL GLAZE 150 5%	1/10W
R2065	1-216-089-91	METAL GLAZE 47K 5%	1/10W
R2066	1-216-017-91	METAL GLAZE 47 5%	1/10W
R2067	1-249-397-11	CARBON 22 5%	1/4W F
R2110	1-216-295-91	CONDUCTOR, CHIP	
R2111	1-216-295-91	CONDUCTOR, CHIP	
R2114	1-216-295-91	CONDUCTOR, CHIP	
R2116	1-216-295-91	CONDUCTOR, CHIP	

M G

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION			REMARK
R2118	1-216-295-91	CONDUCTOR, CHIP			
R2126	1-216-295-91	CONDUCTOR, CHIP			
R2127	1-216-295-91	CONDUCTOR, CHIP			
R2129	1-216-295-91	CONDUCTOR, CHIP			
R2130	1-216-295-91	CONDUCTOR, CHIP			
R2131	1-216-295-91	CONDUCTOR, CHIP			
		<RELAY>			
RY2001	1-755-177-11	RELAY			
RY2002	1-755-177-11	RELAY			
RY2003	1-755-177-11	RELAY			
**********					
⚠*	8-933-219-00	POWER BLOCK ASSY (G BLOCK ASSY)			
		**********			
	4-047-285-01	SHEET, INSULATING (Q4207)			
	4-382-854-11	SCREW (M3X10), P, SW (+) (IC4104, Q4107, Q4112, Q4113, Q4207, Q4209, D4101, D4106, D4128, R4237)			
		<CAPACITOR>			
C4101	⚠1-113-926-91	CERAMIC	0.0047MF	250V	
C4102	⚠1-113-926-91	CERAMIC	0.0047MF	250V	
C4105	⚠1-113-597-11	FILM	1MF	10%	400V
C4113	⚠1-163-251-91	CERAMIC CHIP	100PF	5%	50V
C4116	⚠1-129-898-91	FILM	0.0022MF	5%	630V
C4118	⚠1-104-332-91	CERAMIC	470PF	10%	2KV
C4119	⚠1-113-597-11	FILM	1MF	10%	400V
C4120	⚠1-113-607-11	ELECT(SOLID)	330MF	20%	400V
C4121	⚠1-165-127-91	CERAMIC	470PF	10%	500V
C4122	⚠1-165-127-91	CERAMIC	470PF	10%	500V
C4123	⚠1-107-905-91	ELECT	4.7MF	20%	50V
C4124	⚠1-137-192-81	FILM	0.33MF	5%	50V
C4125	⚠1-137-192-81	FILM	0.33MF	5%	50V
C4126	⚠1-164-645-91	CERAMIC	1000PF	10%	500V
C4127	⚠1-107-797-81	CERAMIC	150PF	5%	1KV
C4128	⚠1-107-797-81	CERAMIC	150PF	5%	1KV
C4129	⚠1-128-526-91	ELECT	100MF	20%	25V
C4130	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4132	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4133	⚠1-102-989-91	CERAMIC	68PF	5%	500V
C4134	⚠1-163-037-91	CERAMIC CHIP	0.022MF	10%	50V
C4135	⚠1-136-538-11	FILM	0.001MF	3%	2KV
C4136	⚠1-137-192-81	FILM	0.33MF	5%	50V
C4137	⚠1-111-057-91	ELECT	120MF	20%	25V
C4138	⚠1-104-652-91	ELECT	470MF	20%	10V
C4139	⚠1-163-023-91	CERAMIC CHIP	0.015MF	10%	50V
C4140	⚠1-115-766-51	ELECT	0.0022F	20%	16V
C4141	⚠1-137-188-81	FILM	0.15MF	5%	50V
C4142	⚠1-137-188-81	FILM	0.15MF	5%	50V
C4143	⚠1-128-526-91	ELECT	100MF	20%	25V
C4144	⚠1-107-880-91	ELECT	4700MF	20%	10V
C4145	⚠1-107-880-91	ELECT	4700MF	20%	10V
C4146	⚠1-136-333-91	FILM	0.027MF	5%	630V
C4147	⚠1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C4148	⚠1-107-928-91	ELECT	4.7MF	20%	100V
C4149	⚠1-164-646-91	CERAMIC	2200PF	10%	500V
C4150	⚠1-107-966-51	ELECT	220MF	20%	250V
C4151	⚠1-107-928-91	ELECT	4.7MF	20%	100V
C4152	⚠1-107-959-91	ELECT	3.3MF	20%	250V
C4153	⚠1-107-892-91	ELECT	4700MF	20%	25V
C4154	⚠1-107-890-91	ELECT	2200MF	20%	25V
C4155	⚠1-107-934-91	ELECT	220MF	20%	100V
C4156	⚠1-107-888-91	ELECT	47MF	20%	25V
C4157	⚠1-107-888-91	ELECT	47MF	20%	25V
C4158	⚠1-107-928-91	ELECT	4.7MF	20%	100V
C4159	⚠1-107-905-91	ELECT	4.7MF	20%	50V
C4160	⚠1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C4161	⚠1-107-888-91	ELECT	47MF	20%	25V
C4162	⚠1-113-900-51	CERAMIC	470PF	10%	250V
C4163	⚠1-113-900-51	CERAMIC	470PF	10%	250V
C4164	⚠1-107-533-51	FILM	1MF	20%	250V
C4165	⚠1-107-533-51	FILM	1MF	20%	250V
C4166	⚠1-107-875-91	ELECT	220MF	20%	10V
C4167	⚠1-107-906-91	ELECT	10MF	20%	50V
C4168	⚠1-163-037-91	CERAMIC CHIP	0.022MF	10%	50V
C4201	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4202	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4203	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4204	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4205	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4206	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4207	⚠1-107-903-91	ELECT	2.2MF	20%	50V
C4208	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4209	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4211	⚠1-107-909-91	ELECT	47MF	20%	50V
C4212	⚠1-107-909-91	ELECT	47MF	20%	50V
C4213	⚠1-163-251-91	CERAMIC CHIP	100PF	5%	50V
C4215	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4216	⚠1-107-909-91	ELECT	47MF	20%	50V
C4218	⚠1-163-809-91	CERAMIC CHIP	0.047MF	10%	25V
C4227	⚠1-137-190-81	FILM	0.22MF	5%	50V
C4230	⚠1-108-427-91	MYLAR	0.033MF	10%	200V
C4233	⚠1-108-427-91	MYLAR	0.033MF	10%	200V
C4235	⚠1-136-064-11	FILM	0.002MF	3%	2KV
C4236	⚠1-117-398-11	ELECT	33MF	20%	250V
C4237	⚠1-115-516-71	FILM	0.33MF	5%	250V
C4238	⚠1-108-389-91	MYLAR	0.1MF	10%	100V
C4239	⚠1-108-373-91	MYLAR	0.0047MF	10%	100V
C4240	⚠1-137-372-91	FILM	0.022MF	5%	50V
C4242	⚠1-108-393-91	MYLAR	0.22MF	10%	100V
C4243	⚠1-108-389-91	MYLAR	0.1MF	10%	100V
C4244	⚠1-108-415-91	MYLAR	0.0033MF	10%	200V
C4245	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4301	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4302	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4303	⚠1-107-907-91	ELECT	22MF	20%	50V
C4304	⚠1-162-114-71	CERAMIC	0.0047MF		2KV

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

G

REF.NO.	PART NO.	DESCRIPTION	REMARK
		<CONNECTOR>	
CN4002	⚠ 1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P	
CN4003	⚠ 1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P	
CN4004	⚠* 1-580-689-11	PIN, CONNECTOR (PC BOARD) 4P	
CN4005	⚠* 1-564-511-51	PLUG, CONNECTOR 8P	
CN4006	⚠* 1-564-514-11	PLUG, CONNECTOR 11P	
CN4007	⚠* 1-564-516-31	PLUG, CONNECTOR 13P	
CN4008	⚠* 1-564-522-11	PLUG, CONNECTOR 7P	
CN4009	⚠* 1-774-511-11	CONNECTOR, BOARD TO BOARD 10P	
CN4010	⚠* 1-770-212-11	CONNECTOR, BOARD TO BOARD 16P	
CN4011	⚠ 1-764-101-11	PIN, CONNECTOR (PC BOARD) 2P	
		<DIODE>	
D4101	⚠ 8-719-510-53	DIODE D4SB60L	
D4103	⚠ 8-719-404-50	DIODE MA111	
D4105	⚠ 8-719-404-50	DIODE MA111	
D4106	⚠ 8-719-029-04	DIODE D5L60	
D4107	⚠ 8-719-404-50	DIODE MA111	
D4108	⚠ 8-719-404-50	DIODE MA111	
D4109	⚠ 8-719-921-20	DIODE 1SS119-25	
D4110	⚠ 8-719-921-20	DIODE 1SS119-25	
D4111	⚠ 8-719-921-20	DIODE 1SS119-25	
D4112	⚠ 8-719-921-20	DIODE 1SS119-25	
D4113	⚠ 8-719-056-71	ZENER DIODE UDZ-TE-17-2.2B	
D4114	⚠ 8-719-404-50	DIODE MA111	
D4115	⚠ 8-719-024-88	DIODE D1NL20-TR	
D4116	⚠ 8-719-056-71	ZENER DIODE UDZ-TE-17-2.2B	
D4117	⚠ 8-719-404-50	DIODE MA111	
D4118	⚠ 8-719-024-88	DIODE D1NL20-TR	
D4119	⚠ 8-719-032-10	DIODE D1NS4	
D4120	⚠ 8-719-022-98	DIODE D2S4MF	
D4122	⚠ 8-719-022-98	DIODE D2S4MF	
D4123	⚠ 8-719-022-98	DIODE D2S4MF	
D4124	⚠ 8-719-052-86	DIODE D2L40-TA	
D4125	⚠ 8-719-052-86	DIODE D2L40-TA	
D4126	⚠ 8-719-024-88	DIODE D1NL20-TR	
D4127	⚠ 8-719-052-86	DIODE D2L40-TA	
D4128	⚠ 8-719-052-28	DIODE D10SBS4F	
D4129	⚠ 8-719-404-50	DIODE MA111	
D4130	⚠ 8-719-052-86	DIODE D2L40-TA	
D4131	⚠ 8-719-024-88	DIODE D1NL20-TR	
D4132	⚠ 8-719-056-94	ZENER DIODE UDZ-TE-17-20B	
D4133	⚠ 8-719-113-35	ZENER DIODE RD18ESB2	
D4134	⚠ 8-719-404-50	DIODE MA111	
D4135	⚠ 8-719-404-50	DIODE MA111	
D4136	⚠ 8-719-113-35	ZENER DIODE RD18ESB2	
D4138	⚠ 8-719-404-50	DIODE MA111	
D4139	⚠ 8-719-404-50	DIODE MA111	
D4141	⚠ 8-719-404-50	DIODE MA111	
D4142	⚠ 8-719-404-50	DIODE MA111	
D4201	⚠ 8-719-404-50	DIODE MA111	
D4202	⚠ 8-719-056-80	ZENER DIODE UDZ-TE-17-5.1B	
D4204	⚠ 8-719-056-87	ZENER DIODE DTZ10B	
D4206	⚠ 8-719-056-87	ZENER DIODE DTZ10B	
D4211	⚠ 8-719-404-50	DIODE MA111	
D4214	⚠ 8-719-056-92	ZENER DIODE UDZ-TE-17-16B	
D4218	⚠ 8-719-056-90	ZENER DIODE UDZ-TE-17-13B	
D4219	⚠ 8-719-048-73	DIODE ERC90M-03	
D4220	⚠ 8-719-056-99	ZENER DIODE UDZ-TE-17-33B	
D4221	⚠ 8-719-922-20	DIODE 1SS120TD	
D4222	⚠ 8-719-921-20	DIODE 1SS119-25	
D4223	⚠ 8-719-113-16	ZENER DIODE RD16ESB3	
D4224	⚠ 8-719-921-20	DIODE 1SS119-25	
D4225	⚠ 8-719-989-44	DIODE ERA34-10TP1	
D4226	⚠ 8-719-989-44	DIODE ERA34-10TP1	
D4229	⚠ 8-719-404-50	DIODE MA111	
D4301	⚠ 8-719-404-50	DIODE MA111	
D4302	⚠ 8-719-404-50	DIODE MA111	
D4303	⚠ 8-719-056-79	ZENER DIODE UDZ-TE-17-4.7B	
		<FUSE>	
F4101	⚠ 1-576-233-11	FUSE (H.B.C.) (6.3A/250V)	
	⚠ 1-533-223-11	HOLDER, FUSE; F4101	
		<FERRITE BEAD>	
FB4101	⚠ 1-410-396-51	FERRITE BEAD INDUCTOR 0.45UH	
FB4102	⚠ 1-410-396-51	FERRITE BEAD INDUCTOR 0.45UH	
FB4103	⚠ 1-410-396-51	FERRITE BEAD INDUCTOR 0.45UH	
FB4104	⚠ 1-410-396-51	FERRITE BEAD INDUCTOR 0.45UH	
FB4105	⚠ 1-410-396-51	FERRITE BEAD INDUCTOR 0.45UH	
FB4201	⚠ 1-410-397-31	FERRITE BEAD INDUCTOR 1.1UH	
FB4202	⚠ 1-410-397-31	FERRITE BEAD INDUCTOR 1.1UH	
		<IC>	
IC4103	⚠ 8-759-189-04	IC UPC1093J-T	
IC4104	⚠ 8-749-011-42	IC SI-3050F	
IC4105	⚠ 8-749-013-03	IC DM-60	
IC4201	⚠ 8-759-078-48	IC NJM78L12A-T1	
		<COIL>	
L4101	⚠ 1-411-674-11	COIL, CHOKE 68UH	
L4102	⚠ 1-408-603-21	INDUCTOR 10UH	
L4103	⚠ 1-403-588-21	CIL, CHOKE 22UH	
L4104	⚠ 1-406-659-21	COIL, CHOKE 10UH	
L4105	⚠ 1-403-588-21	CIL, CHOKE 22UH	
L4106	⚠ 1-410-645-41	INDUCTOR 100UH	
L4201	⚠ 1-412-537-61	INDUCTOR 100UH	
L4202	⚠ 1-406-660-41	COIL, CHOKE 15UH	
		<PHOTO COUPLER>	
PH4101	⚠ 8-749-010-64	PHOTO COUPLER PC123F2	
PH4102	⚠ 8-719-156-73	PHOTO COUPLER PS2501-1-L	
PH4103	⚠ 8-749-010-64	PHOTO COUPLER PC123F2	

G

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION				REMARK
		<IC LINK>				
PS4101	⚠1-532-685-91	LINK, IC 0.8A/150V				
PS4102	⚠1-532-637-91	LINK, IC 1A/150V				
PS4103	⚠1-533-593-31	LINK, IC 2A				
PS4104	⚠1-533-593-31	LINK, IC 2A				
PS4105	⚠1-533-595-31	LINK, IC 3.15A				
PS4106	⚠1-533-593-31	LINK, IC 2A				
PS4201	⚠1-533-592-31	LINK, IC 1.6A				
		<TRANSISTOR>				
Q4103	⚠8-729-824-26	TRANSISTOR 2SA1338-5-TB				
Q4104	⚠8-729-824-26	TRANSISTOR 2SA1338-5-TB				
Q4106	⚠8-729-920-75	TRANSISTOR 2SC2412K-T-146-QR				
Q4107	⚠8-729-039-47	TRANSISTOR 2SK2195				
Q4110	⚠8-729-033-24	TRANSISTOR DTC114GKAT146				
Q4111	⚠8-729-033-26	TRANSISTOR DTA114GKAT146				
Q4112	⚠8-729-033-15	TRANSISTOR 2SC4833MNP-2				
Q4113	⚠8-729-033-15	TRANSISTOR 2SC4833MNP-2				
Q4114	⚠8-729-920-75	TRANSISTOR 2SC2412K-T-146-QR				
Q4115	⚠8-729-039-74	TRANSISTOR 2SC4833MNP-1				
Q4116	⚠8-729-039-74	TRANSISTOR 2SC4833MNP-1				
Q4117	⚠8-729-033-26	TRANSISTOR DTA114GKAT146				
Q4118	⚠8-729-920-72	TRANSISTOR 2SA1037K-T-146-QR				
Q4119	⚠8-729-033-26	TRANSISTOR DTA114GKAT146				
Q4120	⚠8-729-230-44	TRANSISTOR 2SC2458-YGR				
Q4121	⚠8-729-036-01	TRANSISTOR 2SA1371DE-AE				
Q4122	⚠8-729-033-24	TRANSISTOR DTC114GKAT146				
Q4123	⚠8-729-033-26	TRANSISTOR DTA114GKAT146				
Q4124	⚠8-729-033-24	TRANSISTOR DTC114GKAT146				
Q4125	⚠8-729-901-91	TRANSISTOR 2SC2411K-T-146-CQ				
Q4201	⚠8-729-027-52	TRANSISTOR DTC124EKA-T146				
Q4202	⚠8-729-904-55	TRANSISTOR DTB143EK-T-146				
Q4203	⚠8-729-143-24	TRANSISTOR 2SC1621-B3-T1B2B3				
Q4204	⚠8-729-027-52	TRANSISTOR DTC124EKA-T146				
Q4205	⚠8-729-901-91	TRANSISTOR 2SC2411K-T-146-CQ				
Q4206	⚠8-729-902-02	TRANSISTOR 2SA1036K-T-146-Q				
Q4207	⚠8-729-033-91	TRANSISTOR 2SK1120 LB SONY2				
Q4209	⚠8-729-035-88	TRANSISTOR 2SJ449(1)				
Q4301	⚠8-729-033-24	TRANSISTOR DTC114GKAT146				
Q4302	⚠8-729-033-24	TRANSISTOR DTC114GKAT146				
		<RESISTOR>				
R4106	⚠1-215-485-91	METAL	470K	1%	1/4W	
R4107	⚠1-215-485-91	METAL	470K	1%	1/4W	
R4114	⚠1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R4115	⚠1-216-001-91	METAL GLAZE	10	5%	1/10W	
R4120	⚠1-216-065-91	METAL GLAZE	4.7K	5%	1/10W	
R4121	⚠1-216-065-91	METAL GLAZE	4.7K	5%	1/10W	
R4122	⚠1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R4123	⚠1-215-485-91	METAL	470K	1%	1/4W	
R4124	⚠1-215-483-91	METAL	390K	1%	1/4W	
R4125	⚠1-218-191-71	METAL OXIDE	0.1	5%	1W	F
R4126	⚠1-249-429-91	CARBON	10K	5%	1/4W	F
R4127	⚠1-215-485-91	METAL	470K	1%	1/4W	
R4128	⚠1-218-191-71	METAL OXIDE	0.1	5%	1W	F
R4129	⚠1-215-483-91	METAL	390K	1%	1/4W	
R4130	⚠1-202-933-61	FUSIBLE	0.1	10%	1/2W	F
R4131	⚠1-218-642-71	METAL OXIDE	100K	5%	1W	F
R4132	⚠1-218-642-71	METAL OXIDE	100K	5%	1W	F
R4133	⚠1-216-085-91	METAL GLAZE	33K	5%	1/10W	
R4134	⚠1-216-073-91	METAL GLAZE	10K	5%	1/10W	
R4135	⚠1-216-113-91	METAL GLAZE	470K	5%	1/10W	
R4136	⚠1-216-057-91	METAL GLAZE	2.2K	5%	1/10W	
R4137	⚠1-216-097-91	METAL GLAZE	100K	5%	1/10W	
R4138	⚠1-218-642-71	METAL OXIDE	100K	5%	1W	F
R4139	⚠1-218-642-71	METAL OXIDE	100K	5%	1W	F
R4140	⚠1-216-357-71	METAL OXIDE	4.7	5%	1W	F
R4141	⚠1-215-859-71	METAL OXIDE	22	5%	1W	F
R4142	⚠1-215-859-71	METAL OXIDE	22	5%	1W	F
R4143	⚠1-216-081-91	METAL GLAZE	22K	5%	1/10W	
R4144	⚠1-216-357-71	METAL OXIDE	4.7	5%	1W	F
R4145	⚠1-217-418-61	FUSIBLE	0.47	10%	1/2W	F
R4146	⚠1-215-479-91	METAL	270K	1%	1/4W	
R4147	⚠1-215-479-91	METAL	270K	1%	1/4W	
R4148	⚠1-215-479-91	METAL	270K	1%	1/4W	
R4149	⚠1-216-304-91	METAL GLAZE	3.3	5%	1/10W	
R4150	⚠1-215-479-91	METAL	270K	1%	1/4W	
R4151	⚠1-249-389-91	CARBON	4.7	5%	1/4W	F
R4152	⚠1-216-304-91	METAL GLAZE	3.3	5%	1/10W	
R4153	⚠1-216-073-91	METAL GLAZE	10K	5%	1/10W	
R4154	⚠1-216-651-91	METAL CHIP	1K	0.50%	1/10W	
R4155	⚠1-216-669-91	METAL CHIP	5.6K	0.50%	1/10W	
R4156	⚠1-216-061-91	METAL GLAZE	3.3K	5%	1/10W	
R4157	⚠1-216-065-91	METAL GLAZE	4.7K	5%	1/10W	
R4158	⚠1-216-057-91	METAL GLAZE	2.2K	5%	1/10W	
R4159	⚠1-216-633-91	METAL CHIP	180	0.50%	1/10W	
R4160	⚠1-216-649-91	METAL CHIP	820	0.50%	1/10W	
R4161	⚠1-211-800-71	FUSIBLE	2.2	5%	1/2W	F
R4162	⚠1-216-031-91	METAL GLAZE	180	5%	1/10W	
R4163	⚠1-216-031-91	METAL GLAZE	180	5%	1/10W	
R4164	⚠1-216-113-91	METAL GLAZE	470K	5%	1/10W	
R4165	⚠1-249-413-91	CARBON	470	5%	1/4W	F
R4166	⚠1-215-483-91	METAL	390K	1%	1/4W	
R4167	⚠1-216-689-91	METAL CHIP	39K	0.50%	1/10W	
R4168	⚠1-216-673-91	METAL CHIP	8.2K	0.50%	1/10W	
R4169	⚠1-216-025-91	METAL GLAZE	100	5%	1/10W	
R4170	⚠1-215-473-91	METAL	150K	1%	1/4W	
R4171	⚠1-216-065-91	METAL GLAZE	4.7K	5%	1/10W	
R4172	⚠1-216-065-91	METAL GLAZE	4.7K	5%	1/10W	
R4173	⚠1-216-345-71	METAL OXIDE	0.47	5%	1W	F
R4174	⚠1-216-057-91	METAL GLAZE	2.2K	5%	1/10W	
R4175	⚠1-216-073-91	METAL GLAZE	10K	5%	1/10W	
R4176	⚠1-216-073-91	METAL GLAZE	10K	5%	1/10W	
R4177	⚠1-216-397-71	METAL OXIDE	4.7	5%	3W	F
R4178	⚠1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R4179	⚠1-260-304-71	CARBON	10	5%	1/2W	
R4180	⚠1-216-057-91	METAL GLAZE	2.2K	5%	1/10W	
R4181	⚠1-260-292-71	CARBON	1	5%	1/2W	
R4182	⚠1-205-998-11	WIREWOUND	1	5%	10W	
R4183	⚠1-202-914-91	SOLID	390K	20%	1/2W	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

G GA

REF.NO.	PART NO.	DESCRIPTION			REMARK
R4184	⚠1-216-065-91	METAL GLAZE	4.7K	5%	1/10W
R4185	⚠1-259-033-91	CARBON	1	5%	1/4W
R4186	⚠1-218-642-71	METAL OXIDE	100K	5%	1W F
R4188	⚠1-216-045-91	METAL GLAZE	680	5%	1/10W
R4189	⚠1-216-065-91	METAL GLAZE	4.7K	5%	1/10W
R4190	⚠1-216-049-91	METAL GLAZE	1K	5%	1/10W
R4191	⚠1-249-397-11	CARBON	22	5%	1/4W F
R4192	⚠1-216-295-91	CONDUCTOR, CHIP			
R4193	⚠1-216-113-91	METAL GLAZE	470K	5%	1/10W
R4201	⚠1-216-001-91	METAL GLAZE	10	5%	1/10W
R4202	⚠1-216-089-91	METAL GLAZE	47K	5%	1/10W
R4203	⚠1-216-089-91	METAL GLAZE	47K	5%	1/10W
R4205	⚠1-216-065-91	METAL GLAZE	4.7K	5%	1/10W
R4206	⚠1-216-057-91	METAL GLAZE	2.2K	5%	1/10W
R4207	⚠1-247-807-91	CARBON	100	5%	1/4W
R4208	⚠1-247-807-91	CARBON	100	5%	1/4W
R4209	⚠1-216-057-91	METAL GLAZE	2.2K	5%	1/10W
R4211	⚠1-216-647-91	METAL CHIP	680	0.50%	1/10W
R4212	⚠1-216-647-91	METAL CHIP	680	0.50%	1/10W
R4213	⚠1-216-041-91	METAL GLAZE	470	5%	1/10W
R4214	⚠1-216-025-91	METAL GLAZE	100	5%	1/10W
R4216	⚠1-216-647-91	METAL CHIP	680	0.50%	1/10W
R4218	⚠1-216-073-91	METAL GLAZE	10K	5%	1/10W
R4219	⚠1-216-647-91	METAL CHIP	680	0.50%	1/10W
R4222	⚠1-216-671-91	METAL CHIP	6.8K	0.50%	1/10W
R4223	⚠1-216-671-91	METAL CHIP	6.8K	0.50%	1/10W
R4226	⚠1-249-397-91	CARBON	22	5%	1/4W F
R4228	⚠1-249-397-91	CARBON	22	5%	1/4W F
R4231	⚠1-216-663-91	METAL CHIP	3.3K	0.50%	1/10W
R4232	⚠1-216-049-91	METAL GLAZE	1K	5%	1/10W
R4233	⚠1-216-689-91	METAL CHIP	39K	0.50%	1/10W
R4234	⚠1-216-675-91	METAL CHIP	10K	0.50%	1/10W
R4235	⚠1-216-657-91	METAL CHIP	1.8K	0.50%	1/10W
R4236	⚠1-216-673-91	METAL CHIP	8.2K	0.50%	1/10W
R4237	⚠1-219-727-11	METAL	68	5%	10W
R4238	⚠1-249-393-91	CARBON	10	5%	1/4W F
R4239	⚠1-202-873-91	SOLID	4.7K	20%	1/2W
R4240	⚠1-202-885-91	SOLID	1M	20%	1/2W
R4241	⚠1-247-807-91	CARBON	100	5%	1/4W
R4242	⚠1-247-855-91	CARBON	10K	5%	1/4W
R4244	⚠1-247-871-91	CARBON	47K	5%	1/4W
R4245	⚠1-249-413-91	CARBON	470	5%	1/4W F
R4249	⚠1-216-109-91	METAL GLAZE	330K	5%	1/10W
R4301	⚠1-260-085-81	CARBON	68	5%	1/2W
R4302	⚠1-260-085-81	CARBON	68	5%	1/2W
R4303	⚠1-216-073-91	METAL GLAZE	10K	5%	1/10W
R4304	⚠1-216-081-91	METAL GLAZE	22K	5%	1/10W

<RELAY>

RY4301	⚠1-515-849-11	RELAY
RY4302	⚠1-515-849-11	RELAY

<SPARK GAP>

SG4201	⚠1-519-421-32	GAP, DISCHARGE

REF.NO.	PART NO.	DESCRIPTION	REMARK

<TRANSFORMER>

T4101	⚠1-415-935-11	COIL, CHOKE	
T4102	⚠1-429-212-11	TRANSFORMER, CONVERTER (PIT)	
T4103	⚠1-429-254-11	TRANSFORMER, CONVERTER (PRT)	
T4104	⚠1-429-254-11	TRANSFORMER, CONVERTER (PRT)	
T4105	⚠1-429-967-11	TRANSFORMER, CONVERTER (PIT)	
T4106	⚠1-429-966-11	TRANSFORMER, CONVERTER	
T4108	⚠1-429-969-11	TRANSFORMER, LINE FILTER	
T4201	⚠1-415-934-11	COIL, CHOKE 500MMH	
T4202	⚠* X-4034-094-1	TRANSFORMER ASSY, FLYBACK	(NX-4202//J1D4)

<THERMISTOR>

TH4101	⚠1-809-260-11	THERMISTOR, POWER	
TH4301	⚠1-809-827-11	THERMISTOR, POSITIVE	

<TEST PIN>

TP4102	⚠1-695-915-11	TAB (CONTACT)	

<VARISTOR>

VD4101	⚠1-810-974-21	VARISTOR ERZV10D431	
VD4102	⚠1-801-073-31	VARISTOR ERZV14D471	
VD4301	⚠1-810-622-11	VARISTOR	

****

	⚠* 8-933-220-00	POWER BLOCK MCB (GA BOARD,	
		**********	
		COMPLETE)	
		**********	

<CAPACITOR>

C4103	⚠1-163-017-91	CERAMIC CHIP	0.0047MF	10%	50V
C4104	⚠1-163-275-91	CERAMIC CHIP	0.001MF	5%	50V
C4106	⚠1-137-194-81	FILM	0.47MF	5%	50V
C4107	⚠1-126-790-91	ELECT	47MF	20%	25V
C4108	⚠1-137-190-81	FILM	0.22MF	5%	50V
C4109	⚠1-137-190-81	FILM	0.22MF	5%	50V
C4110	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4111	⚠1-164-690-91	CERAMIC CHIP	0.0022MF	5%	50V
C4112	⚠1-126-790-91	ELECT	47MF	20%	25V
C4114	⚠1-137-370-91	FILM	0.01MF	5%	50V
C4115	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4117	⚠1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V

<CONNECTOR>

CN4013	⚠* 1-774-512-11	CONNECTOR, BPARD TO BOARD 10P	

GA GB

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION			REMARK
		<DIODE>			
D4102	⚠ 8-719-056-82	ZENER DIODE UDZ-TE-17-6.2B			
D4104	⚠ 8-719-978-68	ZENER DIODE DTZ16A			
		<IC>			
IC4101	⚠ 8-759-904-94	IC TL494CN			
IC4102	⚠ 8-759-198-31	IC UPC1093J-1-T			
		<TRANSISTOR>			
Q4101	⚠ 8-729-920-72	TRANSISTOR 2SA1037K-T-146-QR			
Q4102	⚠ 8-729-920-72	TRANSISTOR 2SA1037K-T-146-QR			
Q4105	⚠ 8-729-033-26	TRANSISTOR DTA114GKAT146			
Q4108	⚠ 8-729-033-24	TRANSISTOR DTC114GKAT146			
Q4109	⚠ 8-729-033-26	TRANSISTOR DTA114GKAT146			
		<RESISTOR>			
R4101	⚠ 1-216-041-91	METAL GLAZE	470	5%	1/10W
R4102	⚠ 1-216-017-91	METAL GLAZE	47	5%	1/10W
R4103	⚠ 1-216-105-91	METAL GLAZE	220K	5%	1/10W
R4104	⚠ 1-216-073-91	METAL GLAZE	10K	5%	1/10W
R4105	⚠ 1-216-089-91	METAL GLAZE	47K	5%	1/10W
R4108	⚠ 1-216-699-91	METAL CHIP	100K	0.50%	1/10W
R4109	⚠ 1-216-049-91	METAL GLAZE	1K	5%	1/10W
R4110	⚠ 1-216-065-91	METAL GLAZE	4.7K	5%	1/10W
R4111	⚠ 1-216-089-91	METAL GLAZE	47K	5%	1/10W
R4112	⚠ 1-216-025-91	METAL GLAZE	100	5%	1/10W
R4113	⚠ 1-216-667-91	METAL CHIP	4.7K	0.50%	1/10W
R4116	⚠ 1-216-081-91	METAL GLAZE	22K	5%	1/10W
R4117	⚠ 1-216-689-91	METAL CHIP	39K	0.50%	1/10W
R4118	⚠ 1-216-669-91	METAL CHIP	5.6K	0.50%	1/10W
R4119	⚠ 1-216-065-91	METAL GLAZE	4.7K	5%	1/10W
**********					
	⚠* 8-933-221-00	POWER BLOCK MCB (GB BOARD, ********** COMPLETE) **********			
		<CAPACITOR>			
C4210	⚠ 1-163-267-91	CERAMIC CHIP	470PF	5%	50V
C4214	⚠ 1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C4217	⚠ 1-126-796-91	ELECT	22MF	20%	50V
C4219	⚠ 1-126-382-91	ELECT	100MF	20%	16V
C4220	⚠ 1-137-198-81	FILM	1MF	5%	50V
C4221	⚠ 1-163-275-91	CERAMIC CHIP	0.001MF	5%	50V
C4222	⚠ 1-124-261-91	ELECT	10MF	20%	50V
C4223	⚠ 1-164-690-91	CERAMIC CHIP	0.0022MF	5%	50V
C4224	⚠ 1-137-198-81	FILM	1MF	5%	50V
C4225	⚠ 1-164-004-91	CERAMIC CHIP	0.1MF	10%	25V
C4226	⚠ 1-124-261-91	ELECT	10MF	20%	50V
C4228	⚠ 1-163-275-91	CERAMIC CHIP	0.001MF	5%	50V
C4229	⚠ 1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V
C4231	⚠ 1-163-243-91	CERAMIC CHIP	47PF	5%	50V
C4232	⚠ 1-124-257-91	ELECT	2.2MF	20%	50V
C4234	⚠ 1-124-259-91	ELECT	4.7MF	20%	50V
		<CONNECTOR>			
CN4012	⚠* 1-770-214-11	CONNECTOR, BOARD TO BOARD 16P			
		<DIODE>			
D4203	⚠ 8-719-404-50	DIODE MA111			
D4205	⚠ 8-719-404-50	DIODE MA111			
D4207	⚠ 8-719-404-50	DIODE MA111			
D4208	⚠ 8-719-404-50	DIODE MA111			
D4209	⚠ 8-719-404-50	DIODE MA111			
D4210	⚠ 8-719-404-50	DIODE MA111			
D4212	⚠ 8-719-404-50	DIODE MA111			
D4213	⚠ 8-719-404-50	DIODE MA111			
D4215	⚠ 8-719-404-50	DIODE MA111			
D4216	⚠ 8-719-921-20	DIODE 1SS119-25			
D4217	⚠ 8-719-404-50	DIODE MA111			
D4227	⚠ 8-719-056-87	ZENER DIODE UDZ-TE17-10B			
		<IC>			
IC4202	⚠ 8-759-351-04	IC SBA9755S			
		<TRANSISTOR>			
Q4208	⚠ 8-729-027-52	TRANSISTOR DTC124EKA-T146			
		<RESISTOR>			
R4204	⚠ 1-216-667-91	METAL CHIP	4.7K	0.50%	1/10W
R4210	⚠ 1-216-049-91	METAL GLAZE	1K	5%	1/10W
R4215	⚠ 1-216-065-91	METAL GLAZE	4.7K	5%	1/10W
R4217	⚠ 1-216-097-91	METAL GLAZE	100K	5%	1/10W
R4220	⚠ 1-216-097-91	METAL GLAZE	100K	5%	1/10W
R4221	⚠ 1-216-105-91	METAL GLAZE	220K	5%	1/10W
R4224	⚠ 1-216-097-91	METAL GLAZE	100K	5%	1/10W
R4225	⚠ 1-216-025-91	METAL GLAZE	100	5%	1/10W
R4227	⚠ 1-216-117-91	METAL GLAZE	680K	5%	1/10W
R4229	⚠ 1-216-073-91	METAL GLAZE	10K	5%	1/10W
R4230	⚠ 1-216-097-91	METAL GLAZE	100K	5%	1/10W
R4246	⚠ 1-216-295-91	CONDUCTOR, CHIP			
R4247	⚠ 1-216-081-91	METAL GLAZE	22K	5%	1/10W
R4248	⚠ 1-216-073-91	METAL GLAZE	10K	5%	1/10W
**********					

D

REF.NO.	PART NO.	DESCRIPTION	REMARK
*	8-933-213-00	DEFLECTION MCB ASSY (D BLOCK ASSY)	
	4-040-989-01	SPRING (A), TR RETAINER	
	4-040-992-01	SPRING (AA), TR RETAINER	
	4-040-994-01	SPRING (BB), TR RETAINER	
	4-047-285-11	SHEET, INSULATING	
	4-055-721-01	SHEET, INSULATOR	
	4-382-854-01	SCREW (M3X8), P, SW (+) (IC6401)	
*	7-322-065-72	RUBBER, RTV (SE-9168) (130G)	
	7-685-647-79	SCREW +BVTP 3X10 TYPE2 TT(B)	
	<CAPACITOR>		
C6000	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6001	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6002	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6003	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6004	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6005	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6006	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6007	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6008	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6009	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C6010	1-126-941-11	ELECT 470MF 20% 25V	
C6011	1-126-967-11	ELECT 47MF 20% 50V	
C6012	1-126-967-11	ELECT 47MF 20% 50V	
C6013	1-126-941-11	ELECT 470MF 20% 25V	
C6014	1-126-967-11	ELECT 47MF 20% 50V	
C6015	1-126-967-11	ELECT 47MF 20% 50V	
C6016	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6017	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6018	1-126-967-11	ELECT 47MF 20% 50V	
C6103	1-109-982-11	CERAMIC CHIP 1MF 10% 10V	
C6104	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6105	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6106	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6107	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6110	1-126-967-11	ELECT 47MF 20% 50V	
C6111	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C6112	1-163-239-11	CERAMIC CHIP 33PF 5% 50V	
C6113	1-163-239-11	CERAMIC CHIP 33PF 5% 50V	
C6115	1-126-967-11	ELECT 47MF 20% 50V	
C6116	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6117	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6118	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6120	1-164-492-11	CERAMIC CHIP 0.15MF 10% 16V	
C6122	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C6123	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6124	1-126-967-11	ELECT 47MF 20% 50V	
C6125	1-163-239-11	CERAMIC CHIP 33PF 5% 50V	
C6126	1-163-239-11	CERAMIC CHIP 33PF 5% 50V	
C6127	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C6128	1-109-982-11	CERAMIC CHIP 1MF 10% 10V	
C6129	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6130	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C6131	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6132	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6133	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6200	1-126-960-11	ELECT 1MF 20% 50V	
C6201	1-126-967-11	ELECT 47MF 20% 50V	
C6202	1-104-824-11	FILM 0.0033MF 5% 50V	
C6203	1-163-121-00	CERAMIC CHIP 150PF 5% 50V	
C6204	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6205	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6206	1-113-700-11	FILM 0.0012MF 5% 50V	
C6207	1-126-963-11	ELECT 4.7MF 20% 50V	
C6208	1-113-700-11	FILM 0.0012MF 5% 50V	
C6209	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C6210	1-126-963-11	ELECT 4.7MF 20% 50V	
C6211	1-126-960-11	ELECT 1MF 20% 50V	
C6212	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6213	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C6214	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6215	1-128-528-11	ELECT 470MF 20% 16V	
C6216	1-126-961-11	ELECT 2.2MF 20% 50V	
C6217	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6218	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6219	1-137-370-11	FILM 0.01MF 5% 50V	
C6220	1-126-961-11	ELECT 2.2MF 20% 50V	
C6221	1-126-960-11	ELECT 1MF 20% 50V	
C6222	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6223	1-107-823-11	CERAMIC CHIP 0.47MF 10% 16V	
C6303	1-126-964-11	ELECT 10MF 20% 50V	
C6304	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C6305	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
C6306	1-163-235-11	CERAMIC CHIP 22PF 5% 50V	
C6309	1-136-173-00	FILM 0.47MF 5% 50V	
C6310	1-137-365-11	FILM 0.0015MF 5% 50V	
C6311	1-126-967-11	ELECT 47MF 20% 50V	
C6312	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6313	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6314	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C6315	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6316	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6317	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6318	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6319	1-126-964-11	ELECT 10MF 20% 50V	
C6320	1-110-501-11	CERAMIC CHIP 0.33MF 10% 16V	
C6321	1-126-964-11	ELECT 10MF 20% 50V	
C6322	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6323	1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
C6324	1-126-960-11	ELECT 1MF 20% 50V	
C6325	1-163-001-11	CERAMIC CHIP 220PF 10% 50V	
C6326	1-126-964-11	ELECT 10MF 20% 50V	
C6327	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C6328	1-111-262-11	FILM 0.15MF 5% 50V	
C6329	1-137-365-11	FILM 0.0015MF 5% 50V	
C6330	1-126-941-11	ELECT 470MF 20% 25V	
C6331	1-137-399-11	FILM 0.1MF 5% 50V	
C6332	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	

D

REF.NO.	PART NO.	DESCRIPTION			REMARK
C6333	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6334	1-137-365-11	FILM	0.0015MF	5%	50V
C6335	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6336	1-137-365-11	FILM	0.0015MF	5%	50V
C6337	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6340	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C6341	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6342	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6343	1-163-253-11	CERAMIC CHIP	120PF	5%	50V
C6344	1-163-253-11	CERAMIC CHIP	120PF	5%	50V
C6345	1-137-204-11	FILM	0.068MF	5%	50V
C6346	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C6400	1-162-114-00	CERAMIC	0.0047MF		2KV
C6402	1-117-398-11	ELECT	33MF	20%	250V
C6405	1-104-843-11	FILM	0.0055MF	3%	2KV
C6406	1-162-558-11	CERAMIC	100PF	10%	2KV
C6407	1-106-367-00	MYLAR	0.01MF	10%	200V
C6408	1-106-367-00	MYLAR	0.01MF	10%	200V
C6409	1-136-553-11	FILM	0.0015MF	5%	630V
C6410	1-107-606-11	CERAMIC	56PF	5%	500V
C6411	1-162-558-11	CERAMIC	100PF	10%	2KV
C6412	1-137-370-11	FILM	0.01MF	5%	50V
C6413	1-162-134-11	CERAMIC	470PF	10%	2KV
C6414	1-137-368-11	FILM	0.0047MF	5%	50V
C6415	1-137-368-11	FILM	0.0047MF	5%	50V
C6416	1-163-037-11	CERAMIC CHIP	0.022MF	10%	50V
C6417	1-136-173-00	FILM	0.47MF	5%	50V
C6418	1-136-173-00	FILM	0.47MF	5%	50V
C6419	1-107-913-11	ELECT	470MF	20%	50V
C6421	1-107-906-11	ELECT	10MF	20%	50V
C6424	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C6427	1-107-902-11	ELECT	1MF	20%	50V
C6428	1-107-905-11	ELECT	4.7MF	20%	50V
C6429	1-137-370-11	FILM	0.01MF	5%	50V
C6430	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C6431	1-117-400-11	FILM	0.27MF	5%	400V
C6432	1-113-694-11	FILM	0.056MF	5%	400V
C6433	1-107-846-11	FILM	0.1MF	5%	400V
C6434	1-117-400-11	FILM	0.27MF	5%	400V
C6435	1-115-342-11	FILM	0.47MF	5%	400V
C6436	1-110-486-11	FILM	1MF	5%	400V
C6440	1-107-683-11	ELECT	2.2MF	0	250V
C6441	1-107-909-11	ELECT	47MF	20%	50V
C6442	1-107-909-11	ELECT	47MF	20%	50V
C6443	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6444	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6445	1-107-905-11	ELECT	4.7MF	20%	50V
C6446	1-163-023-00	CERAMIC CHIP	0.015MF	10%	50V
C6447	1-113-696-11	FILM	1.4MF	5%	400V
C6448	1-107-683-11	ELECT	2.2MF	0	250V
C6449	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6450	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6451	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6452	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6453	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6454	1-107-906-11	ELECT	10MF	20%	50V
C6455	1-107-513-11	FILM	0.6MF	5%	400V
C6456	1-137-374-11	FILM	0.047MF	5%	50V
C6500	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6501	1-128-528-11	ELECT	470MF	20%	25V
C6502	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6503	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6504	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C6505	1-128-528-11	ELECT	470MF	20%	25V
C6506	1-106-367-00	MYLAR	0.01MF	10%	200V
C6507	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6510	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C6511	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C6512	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C6513	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6514	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C6515	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6520	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6600	1-106-228-00	MYLAR	0.22MF	10%	100V
C6601	1-164-182-11	CERAMIC CHIP	0.0033MF	10%	50V
C6602	1-107-914-11	ELECT	1000MF	20%	25V
C6603	1-107-914-11	ELECT	1000MF	20%	25V
C6604	1-137-399-11	FILM	0.1MF	5%	50V
C6605	1-164-695-11	CERAMIC CHIP	0.0022MF	5%	50V
C6606	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6607	1-163-989-11	CERAMIC CHIP	0.033MF	10%	25V
C6608	1-109-982-11	CERAMIC CHIP	1MF	10%	10V
C6609	1-107-894-11	ELECT	220MF	20%	35V
C6700	1-162-134-11	CERAMIC	470PF	10%	2KV
C6701	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6702	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C6703	1-109-842-11	CERAMIC	10PF	5%	2KV
C6704	1-162-114-00	CERAMIC	0.0047MF		2KV
C6705	1-162-114-00	CERAMIC	0.0047MF		2KV
C6706	1-109-842-11	CERAMIC	10PF	5%	2KV
C6707	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6708	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C6709	1-107-906-11	ELECT	10MF	20%	50V
C6711	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6712	1-163-037-11	CERAMIC CHIP	0.022MF	10%	50V
C6713	1-137-364-11	FILM	0.001MF	5%	50V
C6714	1-107-906-11	ELECT	10MF	20%	50V
C6715	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6716	1-107-909-11	ELECT	47MF	20%	50V
C6717	1-107-444-11	CERAMIC	100PF	5%	2KV
C6718	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6719	1-107-905-11	ELECT	4.7MF	20%	50V
C6720	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6721	1-109-889-11	ELECT	1MF	20%	50V
C6722	1-107-902-11	ELECT	1MF	20%	50V
C6723	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6727	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6728	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C6731	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C6732	1-107-444-11	CERAMIC	100PF	5%	2KV
C6734	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C6801	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V

D

REF.NO.	PART NO.	DESCRIPTION	REMARK
C6803	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6804	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6805	1-107-909-11	ELECT 47MF 20% 50V	
C6806	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6807	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C6808	1-163-003-11	CERAMIC CHIP 330PF 10% 50V	
C6809	1-164-161-11	CERAMIC CHIP 0.0022MF 10% 50V	
C6810	1-107-909-11	ELECT 47MF 20% 50V	
C6901	1-117-722-11	ELECT 2200MF 20% 10V	
		<CONNECTOR>	
CN6001	* 1-564-514-11	PLUG, CONNECTOR 11P	
CN6002	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN6003	* 1-564-511-11	PLUG, CONNECTOR 8P	
CN6004	* 1-564-516-11	PLUG, CONNECTOR 13P	
CN6005	* 1-564-596-11	PLUG, CONNECTOR 15P	
CN6008	* 1-564-596-11	PLUG, CONNECTOR 15P	
CN6010	* 1-778-955-11	PIN, CONNECTOR (PC BOARD) 10P	
CN6011	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN6012	* 1-564-511-11	PLUG, CONNECTOR 8P	
		<COMPOSITION CIRCUIT BLOCK>	
CP6700	1-223-985-11	RESISTOR ASSY, (WF-721)	
		<DIODE>	
D6000	8-719-104-34	DIODE 1S2836	
D6001	8-719-104-34	DIODE 1S2836	
D6002	8-719-801-78	DIODE 1SS184	
D6003	8-719-801-78	DIODE 1SS184	
D6004	8-719-800-76	DIODE 1SS226	
D6005	8-719-800-76	DIODE 1SS226	
D6200	8-719-158-49	ZENER DIODE RD12SB2	
D6300	8-719-404-49	DIODE MA111	
D6301	8-719-404-49	DIODE MA111	
D6302	8-719-800-76	DIODE 1SS226	
D6303	8-719-404-49	DIODE MA111	
D6304	8-719-404-49	DIODE MA111	
D6305	8-719-404-49	DIODE MA111	
D6306	8-719-404-49	DIODE MA111	
D6400	8-719-018-82	DIODE RGP02-20EL-6394	
D6401	8-719-018-82	DIODE RGP02-20EL-6394	
D6402	8-719-106-80	ZENER DIODE RD13M-B2	
D6403	8-719-048-73	DIODE ERC90M-03	
D6404	8-719-061-21	DIODE FMQ-G5FMS	
D6405	8-719-911-19	DIODE 1SS119-25	
D6406	8-719-984-73	DIODE SB560	
D6407	8-719-911-19	DIODE 1SS119-25	
D6408	8-719-109-81	ZENER DIODE RD4.7ESB2	
D6409	8-719-911-19	DIODE 1SS119-25	
D6410	8-719-404-49	DIODE MA111	
D6412	8-719-976-99	ZENER DIODE UDZ-TE-17-5.1B	
D6413	8-719-106-23	ZENER DIODE RD7.5M-B2	
D6414	8-719-951-30	DIODE ERA91-02	
D6415	8-719-404-49	DIODE MA111	
D6416	8-719-404-49	DIODE MA111	
D6417	8-719-404-49	DIODE MA111	
D6418	8-719-106-44	ZENER DIODE RD9.1M-B2	
D6419	8-719-404-49	DIODE MA111	
D6424	8-719-404-49	DIODE MA111	
D6500	8-719-404-49	DIODE MA111	
D6600	8-719-976-99	ZENER DIODE UDZ-TE-17-5.1B	
D6601	8-719-908-03	DIODE GP08D	
D6602	8-719-908-03	DIODE GP08D	
D6603	8-719-908-03	DIODE GP08D	
D6604	8-719-911-19	DIODE 1SS119-25	
D6605	8-719-979-85	DIODE EGP20G	
D6700	8-719-028-72	DIODE RGP02-17EL-6433	
D6701	8-719-028-72	DIODE RGP02-17EL-6433	
D6702	8-719-404-49	DIODE MA111	
D6707	8-719-404-49	DIODE MA111	
D6711	8-719-911-19	DIODE 1SS119-25	
D6713	8-719-911-19	DIODE 1SS119-25	
D6714	8-719-404-49	DIODE MA111	
D6715	8-719-404-49	DIODE MA111	
D6716	8-719-404-49	DIODE MA111	
D6718	8-719-031-34	DIODE RGP02-20EG23	
D6801	8-719-976-99	ZENER DIODE UDZ-TE-17-5.1B	
D6802	8-719-911-19	DIODE 1SS119-25	
D6803	8-719-911-19	DIODE 1SS119-25	
D6804	8-719-911-19	DIODE 1SS119-25	
D6805	8-719-911-19	DIODE 1SS119-25	
D6901	8-719-404-49	DIODE MA111	
D6902	8-719-404-49	DIODE MA111	
		<FERRITE BEAD>	
FB6400	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB6401	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
		<IC>	
IC6000	8-759-231-53	IC TA7805S	
IC6001	8-759-701-59	IC NJM78M09FA	
IC6100	8-759-392-96	IC HD6433337WA04H	
IC6101	8-759-162-80	IC MM1170BFB	
IC6102	8-759-353-44	IC ST24C08FM6TR	
IC6103	8-759-353-44	IC ST24C08FM6TR	
IC6110	8-759-392-96	IC HD6433337WA04H	
IC6111	8-759-162-80	IC MM1170BFB	
IC6112	8-759-178-20	IC M62354FP	
IC6200	8-759-158-84	IC CXA1543M-T6	
IC6201	8-759-510-71	IC BA10358F-E2	
IC6202	8-759-105-35	IC UPC78L10J	
IC6300	8-752-071-57	IC CXA1908S	
IC6301	8-759-239-55	IC TC74HC123AF	
IC6302	8-759-008-94	IC MC14027BF	
IC6303	8-759-510-71	IC BA10358F-E2	
IC6304	8-759-925-72	IC SN74HC02ANS	
IC6306	8-759-239-55	IC TC74HC123AF	

D

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC6307	8-759-011-65	IC MC74HC4053F	
IC6401	8-749-011-63	IC IRSY5305	
IC6402	8-759-103-09	IC UPC4082G2	
IC6500	8-759-708-05	IC NJM78L05A	
IC6501	8-759-803-42	IC LA6500-FA	
IC6502	8-759-100-96	IC UPC4558G2	
IC6600	8-759-103-09	IC UPC4082G2	
IC6601	8-759-980-58	IC TDA8172	
IC6700	8-759-103-09	IC UPC4082G2	
IC6701	8-759-700-69	IC NJM79L12A	
IC6702	8-759-510-71	IC BA10358F-E2	
IC6703	8-759-103-09	IC UPC4082G2	
IC6704	8-759-100-93	IC UPC393G2	
IC6801	8-759-822-38	IC LA6510	
		<COIL>	
L6000	1-412-537-31	INDUCTOR 100UH	
L6001	1-412-537-31	INDUCTOR 100UH	
L6002	1-412-537-31	INDUCTOR 100UH	
L6003	1-412-537-31	INDUCTOR 100UH	
L6004	1-410-482-31	INDUCTOR 100UH	
L6100	1-410-482-31	INDUCTOR 100UH	
L6101	1-410-482-31	INDUCTOR 100UH	
L6200	1-412-537-31	INDUCTOR 100UH	
L6400	1-412-537-31	INDUCTOR 100UH	
L6401	1-406-675-11	COIL, CHOKE 4.7MMH	
L6402	1-411-478-11	COIL, HORIZONTAL LINEARITY	
L6403	1-411-709-11	COIL, HORIZONTAL LINEARITY	
L6404	1-406-671-11	COIL, CHOKE 1.0MMH	
L6406	1-406-675-11	COIL, CHOKE 4.7MMH	
L6701	1-416-105-12	COIL, HORIZONTAL LINEARITY	
L6801	1-412-522-31	INDUCTOR 5.6UH	
		<IC LINK>	
PS6000⚠	1-532-984-91	LINK, IC 2A/90V AC, 60V DC	
PS6001⚠	1-532-984-91	LINK, IC 2A/90V AC, 60V DC	
PS6002⚠	1-532-984-91	LINK, IC 2A/90V AC, 60V DC	
PS6400⚠	1-533-592-31	LINK, IC 1.6A/90V AC, 60V DC	
		<TRANSISTOR>	
Q6122	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6200	8-729-144-85	TRANSISTOR 2SK1133	
Q6201	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6300	8-729-162-13	TRANSISTOR 2SC1621-B3	
Q6301	8-729-901-00	TRANSISTOR DTC124EK	
Q6302	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6304	8-729-144-85	TRANSISTOR 2SK1133	
Q6400	8-729-035-89	TRANSISTOR 2SJ449	
Q6401	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6402	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6403	8-729-144-85	TRANSISTOR 2SK1133	
Q6404	8-729-821-07	TRANSISTOR 2SC3997CA	
Q6405	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6406	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6407	8-729-820-73	TRANSISTOR 2SC3746	
Q6408	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6410	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6411	8-729-901-00	TRANSISTOR DTC124EK	
Q6412	8-729-027-31	TRANSISTOR DTA124EKA-T146	
Q6413	8-729-027-96	TRANSISTOR IRLI530G	
Q6414	8-729-027-31	TRANSISTOR DTA124EKA-T146	
Q6415	8-729-901-00	TRANSISTOR DTC124EK	
Q6416	8-729-901-00	TRANSISTOR DTC124EK	
Q6417	8-729-216-22	TRANSISTOR 2SA1162-G	
Q6418	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q6419	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6420	8-729-027-31	TRANSISTOR DTA124EKA-T146	
Q6421	8-729-901-00	TRANSISTOR DTC124EK	
Q6500	8-729-140-50	TRANSISTOR 2SC3209LK	
Q6700	8-729-020-07	TRANSISTOR 2SC4686A(LBSONY)	
Q6702	8-729-027-31	TRANSISTOR DTA124EKA-T146	
Q6708	8-729-901-00	TRANSISTOR DTC124EK	
Q6709	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6710	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6711	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q6712	8-729-140-96	TRANSISTOR 2SD774-34	
Q6713	8-729-027-71	TRANSISTOR 2SC4913	
Q6715	8-729-027-71	TRANSISTOR 2SC4913	
Q6716	8-729-901-00	TRANSISTOR DTC124EK	
Q6717	8-729-901-00	TRANSISTOR DTC124EK	
		<RESISTOR>	
R6001	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6002	1-216-025-91	METAL GLAZE 100 5% 1/10W	
R6004	1-216-025-91	METAL GLAZE 100 5% 1/10W	
R6005	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6006	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6007	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6008	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6009	1-216-025-91	METAL GLAZE 100 5% 1/10W	
R6010	1-216-025-91	METAL GLAZE 100 5% 1/10W	
R6011	1-216-017-91	METAL GLAZE 47 5% 1/10W	
R6012	1-216-017-91	METAL GLAZE 47 5% 1/10W	
R6013	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6014	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6015	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6021	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6022	1-216-025-91	METAL GLAZE 100 5% 1/10W	
R6023	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6024	1-216-025-91	METAL GLAZE 100 5% 1/10W	
R6027	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6028	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6029	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6030	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6031	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6032	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R6033	1-216-049-91	METAL GLAZE 1K 5% 1/10W	

D

REF.NO.	PART NO.	DESCRIPTION		REMARK
R6034	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6035	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6036	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6037	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6038	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6039	1-216-295-91	CONDUCTOR, CHIP		
R6040	1-216-295-91	CONDUCTOR, CHIP		
R6041	1-216-295-91	CONDUCTOR, CHIP		
R6042	1-216-295-91	CONDUCTOR, CHIP		
R6045	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6046	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6047	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6048	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6049	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6050	1-216-295-91	CONDUCTOR, CHIP		
R6051	1-216-295-91	CONDUCTOR, CHIP		
R6052	1-216-295-91	CONDUCTOR, CHIP		
R6053	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6100	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6101	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6102	1-216-295-91	CONDUCTOR, CHIP		
R6103	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6104	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6105	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6106	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6107	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6108	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6109	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6110	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6112	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6113	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6114	1-216-097-91	METAL GLAZE 100K	5%	1/10W
R6116	1-216-295-91	CONDUCTOR, CHIP		
R6117	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6119	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6120	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6124	1-216-035-00	METAL GLAZE 270	5%	1/10W
R6125	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6128	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6129	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6130	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6134	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6135	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6136	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6137	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6138	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6139	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6141	1-216-063-91	METAL GLAZE 3.9K	5%	1/10W
R6142	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6143	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6144	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6145	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6146	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6147	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6148	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6149	1-216-073-00	METAL GLAZE 10K	5%	1/10W

REF.NO.	PART NO.	DESCRIPTION		REMARK
R6150	1-216-035-00	METAL GLAZE 270	5%	1/10W
R6151	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6152	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6153	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6154	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6155	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6156	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6157	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6158	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6159	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6160	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6161	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6162	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6163	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6164	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W
R6165	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W
R6166	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6167	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6200	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W
R6201	1-216-683-11	METAL CHIP 22K	0.50%	1/10W
R6202	1-216-081-00	METAL GLAZE 22K	5%	1/10W
R6203	1-216-025-91	METAL GLAZE 100	5%	1/10W
R6204	1-215-378-00	METAL 16	1%	1/4W
R6205	1-216-693-11	METAL CHIP 56K	0.50%	1/10W
R6206	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6207	1-216-675-11	METAL CHIP 10K	0.50%	1/10W
R6208	1-216-683-11	METAL CHIP 22K	0.50%	1/10W
R6209	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6210	1-216-655-11	METAL CHIP 1.5K	0.50%	1/10W
R6211	1-216-683-11	METAL CHIP 22K	0.50%	1/10W
R6212	1-216-657-11	METAL CHIP 1.8K	0.50%	1/10W
R6213	1-216-639-11	METAL CHIP 330	0.50%	1/10W
R6214	1-216-081-00	METAL GLAZE 22K	5%	1/10W
R6215	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6216	1-216-683-11	METAL CHIP 22K	0.50%	1/10W
R6217	1-216-685-11	METAL CHIP 27K	0.50%	1/10W
R6218	1-216-694-11	METAL CHIP 62K	0.50%	1/10W
R6219	1-216-675-11	METAL CHIP 10K	0.50%	1/10W
R6220	1-216-097-91	METAL GLAZE 100K	5%	1/10W
R6221	1-216-661-11	METAL CHIP 2.7K	0.50%	1/10W
R6222	1-216-059-00	METAL GLAZE 2.7K	5%	1/10W
R6223	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6224	1-216-113-00	METAL GLAZE 470K	5%	1/10W
R6225	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6226	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R6228	1-216-683-11	METAL CHIP 22K	0.50%	1/10W
R6229	1-216-683-11	METAL CHIP 22K	0.50%	1/10W
R6230	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6231	1-216-061-00	METAL GLAZE 3.3K	5%	1/10W
R6232	1-216-097-91	METAL GLAZE 100K	5%	1/10W
R6233	1-216-093-00	METAL GLAZE 68K	5%	1/10W
R6234	1-216-089-91	METAL GLAZE 47K	5%	1/10W
R6235	1-216-089-91	METAL GLAZE 47K	5%	1/10W
R6305	1-216-081-00	METAL GLAZE 22K	5%	1/10W
R6306	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R6307	1-216-057-00	METAL GLAZE 2.2K	5%	1/10W

D

REF.NO.	PART NO.	DESCRIPTION			REMARK
R6308	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6309	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6310	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6311	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6312	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6313	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6316	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6317	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R6318	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6319	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6320	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6321	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R6322	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6323	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6324	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W
R6325	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6326	1-216-295-91	CONDUCTOR, CHIP			
R6328	1-216-671-11	METAL CHIP	6.8K	0.50%	1/10W
R6329	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6330	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W
R6331	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6332	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6333	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6334	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6335	1-216-121-91	METAL GLAZE	1M	5%	1/10W
R6336	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6337	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W
R6338	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R6340	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6341	1-218-772-11	METAL CHIP	680K	0.50%	1/10W
R6342	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R6349	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W
R6350	1-216-659-11	METAL CHIP	2.2K	0.50%	1/10W
R6351	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6352	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R6353	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6354	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6360	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6361	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R6400	1-249-413-11	CARBON	470	5%	1/4W F
R6401	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6402	1-216-017-91	METAL GLAZE	47	5%	1/10W
R6403	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6404	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6405	1-260-311-11	CARBON	39	5%	1/2W
R6406	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6407	1-249-401-11	CARBON	47	5%	1/4W F
R6408	1-215-861-00	METAL OXIDE	47	5%	1W F
R6409	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6410	1-249-429-11	CARBON	10K	5%	1/4W F
R6411	1-214-840-00	METAL	100	1%	1/2W
R6412	1-214-840-00	METAL	100	1%	1/2W
R6413	1-214-840-00	METAL	100	1%	1/2W
R6415	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R6416	1-216-386-11	METAL OXIDE	0.56	5%	3W F
R6417	1-219-677-11	METAL	1.8	5%	10W
R6418	1-216-431-11	METAL OXIDE	560	5%	1W F
R6419	1-216-041-00	METAL GLAZE	470	5%	1/10W
R6420	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6421	1-215-860-11	METAL OXIDE	33	5%	1W F
R6422	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6423	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6424	1-211-796-11	FUSIBLE	1	5%	1/2W F
R6426	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R6432	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6433	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6434	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6435	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6436	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R6437	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6438	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6439	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6440	1-247-807-31	CARBON	100	5%	1/4W
R6441	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6442	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6443	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R6444	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R6445	1-216-611-11	METAL CHIP	22	0.50%	1/10W
R6446	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6447	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6448	1-216-017-91	METAL GLAZE	47	5%	1/10W
R6449	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6450	1-215-863-11	METAL OXIDE	100	5%	1W F
R6451	1-216-691-11	METAL CHIP	47K	0.50%	1/10W
R6452	1-249-401-11	CARBON	47	5%	1/4W F
R6453	1-260-313-51	CARBON	56	5%	1/2W
R6454	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6455	1-216-693-11	METAL CHIP	56K	0.50%	1/10W
R6457	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6458	1-259-884-11	CARBON	4.7M	5%	1/4W
R6459	1-259-884-11	CARBON	4.7M	5%	1/4W
R6460	1-259-884-11	CARBON	4.7M	5%	1/4W
R6461	1-259-884-11	CARBON	4.7M	5%	1/4W
R6462	1-259-884-11	CARBON	4.7M	5%	1/4W
R6463	1-216-001-00	METAL GLAZE	10	5%	1/10W
R6464	1-216-677-11	METAL CHIP	12K	0.50%	1/10W
R6465	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6466	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6467	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6468	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R6469	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6470	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6471	1-247-807-31	CARBON	100	5%	1/4W
R6472	1-260-313-51	CARBON	56	5%	1/2W
R6473	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6474	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6475	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6476	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6477	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6478	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6479	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6480	1-216-097-91	METAL GLAZE	100K	5%	1/10W

D

REF.NO.	PART NO.	DESCRIPTION			REMARK
R6481	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6482	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6483	1-218-764-11	METAL CHIP	330K	0.50%	1/10W
R6484	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6485	1-247-807-31	CARBON	100	5%	1/4W
R6486	1-247-807-31	CARBON	100	5%	1/4W
R6487	1-215-421-00	METAL	1K	1%	1/4W
R6500	1-260-288-11	CARBON	0.47	5%	1/2W
R6501	1-216-673-11	METAL CHIP	8.2K	0.50%	1/10W
R6502	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6503	1-249-429-11	CARBON	10K	5%	1/4W
R6504	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6505	1-216-393-00	METAL OXIDE	2.2	5%	3W F
R6506	1-216-393-00	METAL OXIDE	2.2	5%	3W F
R6507	1-260-288-11	CARBON	0.47	5%	1/2W
R6508	1-216-651-11	METAL CHIP	1K	0.50%	1/10W
R6510	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W
R6511	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W
R6512	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6513	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6515	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W
R6516	1-216-681-11	METAL CHIP	18K	0.50%	1/10W
R6517	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6518	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6519	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6520	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6600	1-260-292-11	CARBON	1	5%	1/2W
R6602	1-216-691-11	METAL CHIP	47K	0.50%	1/10W
R6603	1-260-292-11	CARBON	1	5%	1/2W
R6604	1-249-429-11	CARBON	10K	5%	1/4W
R6605	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6607	1-249-383-11	CARBON	1.5	5%	1/4W F
R6608	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6609	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6610	1-215-866-11	METAL OXIDE	330	5%	1W F
R6611	1-216-665-11	METAL CHIP	3.9K	0.50%	1/10W
R6612	1-216-667-11	METAL CHIP	4.7K	0.50%	1/10W
R6613	1-216-651-11	METAL CHIP	1K	0.50%	1/10W
R6614	1-249-413-11	CARBON	470	5%	1/4W F
R6615	1-214-798-21	METAL	1.8	1%	1/2W
R6616	1-214-798-21	METAL	1.8	1%	1/2W
R6629	1-216-647-11	METAL CHIP	680	0.50%	1/10W
R6630	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R6700	1-219-510-11	RESISTOR(SURGE RESISTANT)			470K
R6701	1-216-687-11	METAL CHIP	33K	0.50%	1/10W
R6702	1-219-510-11	RESISTOR(SURGE RESISTANT)			470K
R6703	1-219-510-11	RESISTOR(SURGE RESISTANT)			470K
R6704	1-219-720-11	METAL	10M	5%	1W
R6705	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R6706	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R6707	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6708	1-216-691-11	METAL CHIP	47K	0.50%	1/10W
R6709	1-218-758-11	METAL CHIP	180K	0.50%	1/10W
R6710	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6711	1-219-746-11	RESISTOR (SURGE RESISTANT)			1K
R6715	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R6722	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6723	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6724	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6731	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6738	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R6739	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R6740	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R6741	1-216-025-91	METAL GLAZE	100	5%	1/10W
R6742	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6743	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6744	1-216-041-00	METAL GLAZE	470	5%	1/10W
R6745	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6746	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6747	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6748	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R6749	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R6750	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6751	1-218-758-11	METAL CHIP	180K	0.50%	1/10W
R6755	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R6756	1-219-746-11	RESISTOR (SURGE RESISTANT)			1K
R6757	1-218-756-11	METAL CHIP	150K	0.50%	1/10W
R6758	1-218-754-11	METAL CHIP	120K	0.50%	1/10W
R6759	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6760	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6761	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R6762	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6763	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R6764	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6767	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6768	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R6769	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6770	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6771	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6773	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R6774	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6775	1-216-121-91	METAL GLAZE	1M	5%	1/10W
R6801	1-249-383-11	CARBON	1.5	5%	1/4W F
R6802	1-249-383-11	CARBON	1.5	5%	1/4W F
R6803	1-249-421-11	CARBON	2.2K	5%	1/4W
R6806	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R6807	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R6808	1-216-079-00	METAL GLAZE	18K	5%	1/10W
R6809	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R6810	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R6811	1-249-385-11	CARBON	2.2	5%	1/4W
R6812	1-249-383-11	CARBON	1.5	5%	1/4W F
R6813	1-216-093-00	METAL GLAZE	68K	5%	1/10W
R6814	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R6815	1-216-473-11	METAL OXIDE	56	5%	3W F
R6816	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R6817	1-249-385-11	CARBON	2.2	5%	1/4W
R6818	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R6819	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R6820	1-249-383-11	CARBON	1.5	5%	1/4W F
R6821	1-216-097-91	METAL GLAZE	100K	5%	1/10W

D H2 H1

REF.NO.	PART NO.	DESCRIPTION			REMARK
R6822	1-216-450-00	METAL OXIDE	82	5% 2W	F
R6901	1-216-675-11	METAL CHIP	10K	0.50% 1/10W	
R6902	1-218-776-11	METAL CHIP	1M	0.50% 1/10W	
		<RELAY>			
RY6400	1-515-849-11	RELAY			
RY6401	1-515-849-11	RELAY			
		<SPARK GAP>			
SG6700	1-519-422-11	GAP, SPARK			
SG6701	1-519-466-11	GAP, SPARK			
		<TRANSFORMER>			
T6400	1-411-594-11	COIL, CHOKE 5MMH			
T6401	1-426-998-11	TRANSFORMER, FERRITE (HST)			
T6402	1-429-303-11	TRANSFORMER, FERRITE (HDT)			
T6500	1-429-970-11	TRANSFORMER, FERRITE (HCT)			
T6700	1-431-105-11	TRANSFORMER, FERRITE (FRT)			
T6701	1-429-971-11	TRANSFORMER, FERRITE (DFT)			
		<THERMISTOR>			
TH6400	1-807-796-11	THERMISTOR			
		<CRYSTAL>			
X6100	1-579-562-11	VIBRATOR, CRYSTAL			
X6101	1-579-562-11	VIBRATOR, CRYSTAL			
**********					
*	8-933-218-00	INPUT SW BOARD (H2 BOARD, ********** COMPLETE) **********			
		<CONNECTOR>			
CN3500	* 1-564-507-11	PLUG, CONNECTOR 4P			
		<DIODE>			
D3501	8-719-800-76	DIODE 1SS226			
D3502	8-719-800-76	DIODE 1SS226			
		<RESISTOR>			
R3500	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R3501	1-216-089-91	METAL GLAZE	47K	5%	1/10W

REF.NO.	PART NO.	DESCRIPTION			REMARK
		<SWITCH>			
S3500	1-570-907-11	SWITCH, SLIDE (HD15-AUTO-BNC)			
**********					
*	8-933-217-00	CONTROL BLOCK BOARD (H1 BOARD, ********** COMPLETE) **********			
*	4-049-089-01	HOLDER, LED			
		<CAPACITOR>			
C3001	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C3002	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C3003	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C3004	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C3005	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C3006	1-124-589-11	ELECT	47MF	20%	16V
C3007	1-126-022-11	ELECT	47MF	20%	25V
C3008	1-126-022-11	ELECT	47MF	20%	25V
		<CONNECTOR>			
CN3001	* 1-778-682-11	PIN, CONNECTOR (PC BOARD) 8P			
CN3002	* 1-778-681-11	PIN, CONNECTOR (PC BOARD) 5P			
CN3003	* 1-564-519-11	PLUG, CONNECTOR 4P			
CN3010	* 1-766-179-11	PIN, CONNECTOR (PC BOARD) 2P			
		<DIODE>			
D3001	8-719-801-78	DIODE 1SS184			
D3002	8-719-801-78	DIODE 1SS184			
D3003	8-719-104-34	DIODE 1S2836			
D3004	8-719-104-34	DIODE 1S2836			
D3030	8-719-311-90	DIODE SEL1922D-C			
D3031	8-719-045-19	DIODE SPB-26MVWF			
D3101	8-719-976-99	ZENER DIODE UDZ-TE-17-5.1B			
		<TRANSISTOR>			
Q3030	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q3031	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
Q3032	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
		<RESISTOR>			
R3000	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W
R3002	1-216-035-00	METAL GLAZE	270	5%	1/10W
R3003	1-216-037-00	METAL GLAZE	330	5%	1/10W
R3004	1-216-039-00	METAL GLAZE	390	5%	1/10W
R3005	1-216-043-91	METAL GLAZE	560	5%	1/10W
R3006	1-216-045-00	METAL GLAZE	680	5%	1/10W
R3007	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R3008	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W

H1 J L

REF.NO.	PART NO.	DESCRIPTION			REMARK
R3009	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R3010	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R3011	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R3030	1-216-037-00	METAL GLAZE	330	5%	1/10W
R3031	1-216-041-00	METAL GLAZE	470	5%	1/10W
R3032	1-216-035-00	METAL GLAZE	270	5%	1/10W
R3033	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R3034	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R3035	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R3101	1-220-277-11	METAL GLAZE	2.2K	5%	1/4W
R3102	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R3103	1-216-699-11	METAL CHIP	100K	0.50%	1/10W
		<SWITCH>			
S3001	1-571-532-21	SWITCH, TACTIL (CONT+)			
S3002	1-571-532-21	SWITCH, TACTIL (CONT–)			
S3003	1-571-532-21	SWITCH, TACTIL (BRT+)			
S3004	1-571-532-21	SWITCH, TACTIL (BRT–)			
S3005	1-571-532-21	SWITCH, TACTIL (CENT)			
S3006	1-571-532-21	SWITCH, TACTIL (SIZE)			
S3007	1-571-532-21	SWITCH, TACTIL (GEOM)			
S3008	1-571-532-21	SWITCH, TACTIL (CONV)			
S3009	1-571-532-21	SWITCH, TACTIL (OPTION)			
S3010	1-571-532-21	SWITCH, TACTIL (RESET)			
S3011	1-571-532-21	SWITCH, TACTIL (COLOR)			
		<THERMISTOR>			
TH3101	1-807-796-11	THERMISTOR			

****

* 8-933-215-00 AC SW BOARD (J BOARD, COMPLETE)
****

		<CONNECTOR>			
CN4001	1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P			
		<SWITCH>			
S4001	1-571-433-21	SWITCH, PUSH (AC POWER)			

****

* 8-933-214-00 LCC MCB (L BOARD, COMPLETE)
****

		<CAPACITOR>			
C5001	1-126-022-11	ELECT	47MF	20%	25V
C5002	1-126-022-11	ELECT	47MF	20%	25V
C5008	1-126-177-11	ELECT	100MF	20%	10V
C5009	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5101	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5102	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5103	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5105	1-104-664-11	ELECT	47MF	20%	25V
C5106	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5107	1-137-399-11	FILM	0.1MF	5%	50V
C5108	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5110	1-104-664-11	ELECT	47MF	20%	25V
C5111	1-137-399-11	FILM	0.1MF	5%	50V
C5201	1-126-022-11	ELECT	47MF	20%	25V
C5202	1-126-022-11	ELECT	47MF	20%	25V
C5203	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5204	1-137-399-11	FILM	0.1MF	5%	50V
C5205	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5301	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5303	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5305	1-104-664-11	ELECT	47MF	20%	25V
C5306	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5307	1-137-399-11	FILM	0.1MF	5%	50V
C5308	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V
C5310	1-104-664-11	ELECT	47MF	20%	25V
C5311	1-137-399-11	FILM	0.1MF	5%	50V
		<CONNECTOR>			
CN5001	* 1-564-516-11	PLUG, CONNECTOR 13P			
CN5002	* 1-564-513-11	PLUG, CONNECTOR 10P			
CN5005	* 1-564-506-11	PLUG, CONNECTOR 3P			
		<DIODE>			
D5101	8-719-976-96	ZENER DIODE DTZ4.7C			
D5102	8-719-404-49	DIODE MA111			
D5103	8-719-404-49	DIODE MA111			
D5104	8-719-404-49	DIODE MA111			
D5105	8-719-404-49	DIODE MA111			
D5201	8-719-404-49	DIODE MA111			
D5202	8-719-404-49	DIODE MA111			
D5302	8-719-404-49	DIODE MA111			
D5303	8-719-404-49	DIODE MA111			
D5304	8-719-404-49	DIODE MA111			
D5305	8-719-404-49	DIODE MA111			
		<IC>			
IC5001	1-473-975-11	SENSOR UNIT, MAGNETIC CONPASS			
IC5101	8-759-822-38	IC LA6510			
IC5201	8-759-803-42	IC LA6500-FA			
IC5301	8-759-822-38	IC LA6510			
		<COIL>			
L5001	1-412-537-31	INDUCTOR 100UH			

L

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION			REMARK
		<RESISTOR>			
R5001	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R5002	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R5004	1-216-295-91	CONDUCTOR, CHIP			
R5005	1-216-295-91	CONDUCTOR, CHIP			
R5006	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R5101	1-249-383-11	CARBON	1.5	5%	1/4W F
R5102	1-249-383-11	CARBON	1.5	5%	1/4W F
R5103	1-220-261-11	METAL GLAZE	470	5%	1/4W
R5104	1-216-694-11	METAL CHIP	62K	0.50%	1/10W
R5105	1-216-689-11	METAL CHIP	39K	0.50%	1/10W
R5106	1-216-695-11	METAL CHIP	68K	0.50%	1/10W
R5107	1-216-689-11	METAL CHIP	39K	0.50%	1/10W
R5110	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R5111	1-220-230-11	METAL GLAZE	2.2	10%	1/4W
R5112	1-249-383-11	CARBON	1.5	5%	1/4W F
R5113	1-216-685-11	METAL CHIP	27K	0.50%	1/10W
R5114	1-249-441-11	CARBON	100K	5%	1/4W
R5115	1-215-885-00	METAL OXIDE	68	5%	2W F
R5116	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R5117	1-220-230-11	METAL GLAZE	2.2	10%	1/4W
R5119	1-216-685-11	METAL CHIP	27K	0.50%	1/10W
R5120	1-249-383-11	CARBON	1.5	5%	1/4W F
R5121	1-249-441-11	CARBON	100K	5%	1/4W
R5122	1-215-885-00	METAL OXIDE	68	5%	2W F
R5201	1-249-383-11	CARBON	1.5	5%	1/4W F
R5202	1-249-383-11	CARBON	1.5	5%	1/4W F
R5203	1-249-383-11	CARBON	1.5	5%	1/4W F
R5204	1-249-441-11	CARBON	100K	5%	1/4W
R5205	1-216-683-11	METAL CHIP	22K	0.50%	1/10W
R5206	1-216-449-11	METAL OXIDE	56	5%	2W F
R5207	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R5301	1-249-383-11	CARBON	1.5	5%	1/4W F
R5302	1-249-383-11	CARBON	1.5	5%	1/4W F
R5310	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R5311	1-220-230-11	METAL GLAZE	2.2	10%	1/4W
R5312	1-249-383-11	CARBON	1.5	5%	1/4W F
R5313	1-216-685-11	METAL CHIP	27K	0.50%	1/10W
R5314	1-249-441-11	CARBON	100K	5%	1/4W
R5315	1-215-885-00	METAL OXIDE	68	5%	2W F
R5316	1-216-675-11	METAL CHIP	10K	0.50%	1/10W
R5317	1-220-230-11	METAL GLAZE	2.2	10%	1/4W
R5319	1-216-685-11	METAL CHIP	27K	0.50%	1/10W
R5320	1-249-383-11	CARBON	1.5	5%	1/4W F
R5321	1-249-441-11	CARBON	100K	5%	1/4W
R5322	1-215-885-00	METAL OXIDE	68	5%	2W F
		MISCELLANEOUS			
		**********			
	⚠ 1-251-382-12	INLET, AC 3P(WITH NOISE FILTE)			
	⚠ 1-415-968-11	COIL, LANDING CORRECTION (NS)			
	⚠ 1-415-969-11	COIL, LANDING CORRECTION			
	⚠ 1-415-970-11	COIL, DEGAUSS			
	⚠ 1-765-717-11	CORD SET, POWER (10A/250V)			
	* 1-777-729-11	CABLE, COAXIAL (R)			
	* 1-777-729-21	CABLE, COAXIAL (G)			
	* 1-777-729-31	CABLE, COAXIAL (B)			
	1-900-215-90	CONNECTOR ASSY			
	⚠ 8-451-481-11	DEFLECTION YOKE (Y24FIK-M)			
	⚠ 8-453-013-12	NECK ASSY, PICTURE TBUE (NA298-M)			
V901	⚠ 8-733-002-05	PICTURE TUBE (24FIF)			
	⚠ 8-733-002-80	ITC ASSY (24FIF-R1)			

Sony Corporation
Display Company
Quality Assurance Department
Service Promotion Section

English
97EL05037-1
Printed in Japan
© 1997. 5

9-978-579-01